

REMOVAL

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER** (See page [IP-19](#))

3. **REMOVE CENTER AIRBAG SENSOR ASSEMBLY**

- (a) Disconnect the airbag sensor connectors.
- (b) Using a T40 "torx" socket, remove the 4 screws and airbag sensor.

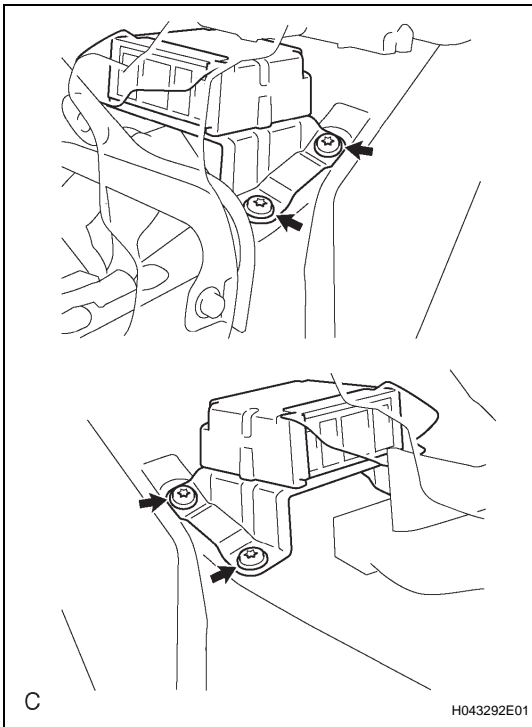

INSTALLATION

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

1. INSTALL CENTER AIRBAG SENSOR ASSEMBLY

- (a) Using a T40 "torx" socket, install the airbag sensor with the 4 screws.

Torque: 20 N*m (200 kgf*cm, 14 ft.*lbf)

CAUTION:

- If the airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
- When installing the airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.

- (b) Connect the airbag sensor connectors.

2. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER CENTER (See page [IP-26](#))**3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL****4. CHECK SRS WARNING LIGHT**

- (a) Check the SRS warning light (see page [RS-18](#)).

RS