


# CENTER AIRBAG SENSOR ASSEMBLY

## COMPONENTS

RS

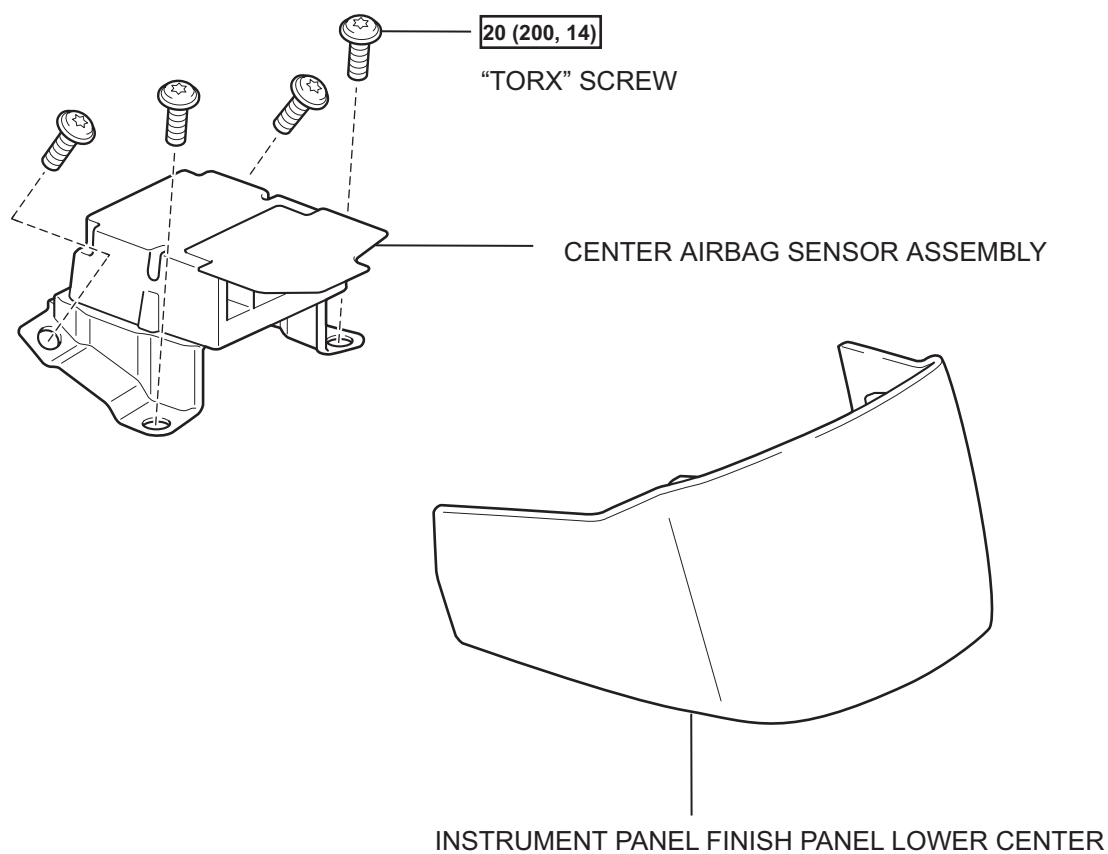

N\*m (kgf\*cm, ft.\*lbf) : Specified torque

## ON-VEHICLE INSPECTION

**1. CHECK CENTER AIRBAG SENSOR ASSEMBLY  
(VEHICLE NOT INVOLVED IN COLLISION AND  
AIRBAG NOT DEPLOYED)**

- (a) Perform a diagnostic system check (see page [RS-24](#)).

**2. CHECK CENTER AIRBAG SENSOR ASSEMBLY  
(VEHICLE INVOLVED IN COLLISION AND AIRBAG  
NOT DEPLOYED)**

- (a) Perform a diagnostic system check (see page [RS-24](#)).

**3. CHECK CENTER AIRBAG SENSOR ASSEMBLY  
(VEHICLE INVOLVED IN COLLISION AND AIRBAG  
DEPLOYED)**

- (a) Replace the center airbag sensor.

**CAUTION:**

**For removal and installation of the center airbag sensor assembly, be sure to follow the correct procedures.**