

RS

REMOVAL

CAUTION:


Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**CAUTION:**


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE NO. 1 AIR CLEANER INLET


- (a) Remove the bolt and air cleaner inlet.

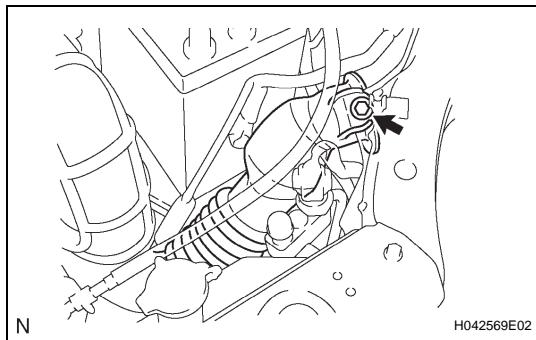**3. REMOVE FRONT AIRBAG SENSOR LH**

- (a) Disconnect the sensor connector.
(b) Remove the 2 bolts and sensor.

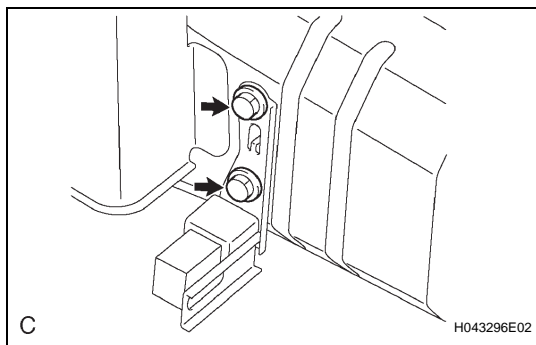**4. REMOVE FRONT AIRBAG SENSOR RH**


- (a) Disconnect the sensor connector.
(b) Remove the 2 bolts and sensor.

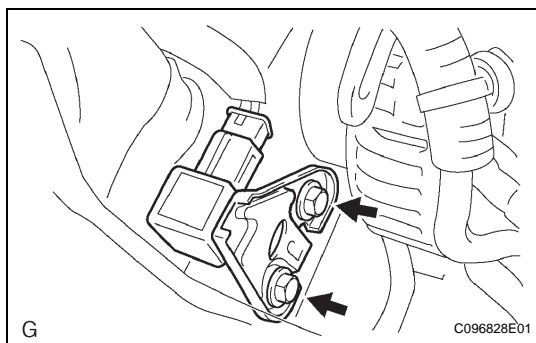

INSTALLATION

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

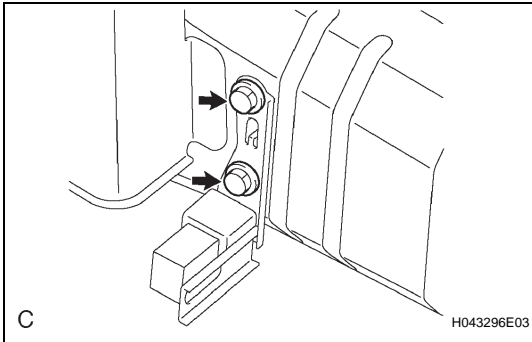RS

1. INSTALL FRONT AIRBAG SENSOR LH

- (a) Install the sensor with the 2 bolts.


Torque: 17.5 N*m (178 kgf*cm, 13 ft.*lbf)

CAUTION:

- If the airbag sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.
- When installing the airbag sensor, make sure that the SRS wiring does not interfere with other parts and is not pinched between other parts.

- (b) Check that there is no free play in the installation parts of the sensor.

- (c) Connect the sensor connector.

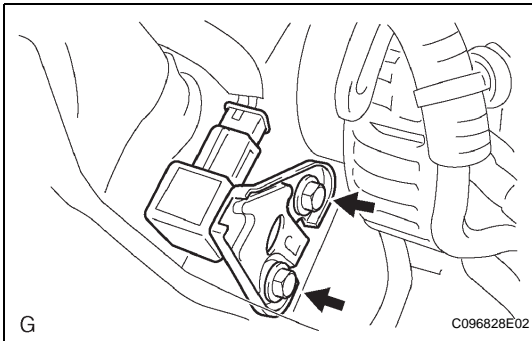

2. INSTALL FRONT AIRBAG SENSOR RH

- (a) Install the sensor with the 2 bolts.


Torque: 17.5 N*m (178 kgf*cm, 13 ft.*lbf)

NOTICE:

- If the airbag sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.
- When installing the airbag sensor, make sure that the SRS wiring does not interfere with other parts and is not pinched between other parts.

- (b) Check that there is no free play in the installation parts of the sensor.

- (c) Connect the sensor connector.

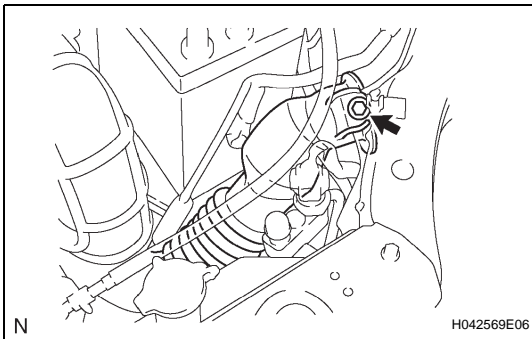

3. INSTALL NO. 1 AIR CLEANER INLET

- (a) Install the air cleaner inlet with the bolt.

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

5. CHECK SRS WARNING LIGHT

- (a) Check the SRS warning light (see page [RS-18](#)).