

RS

REMOVAL

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE FRONT SEAT ASSEMBLY**

(a) Remove the front seat assembly (see page [SE-3](#)).

3. **REMOVE SEAT POSITION AIRBAG SENSOR**


(a) Disconnect the connector.
(b) Using a T30 "torx" socket, remove the screw and seat position sensor.

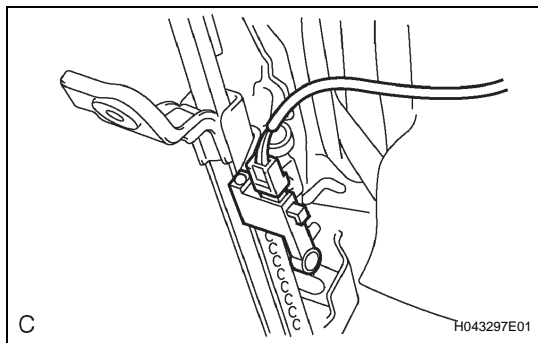

INSTALLATION

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

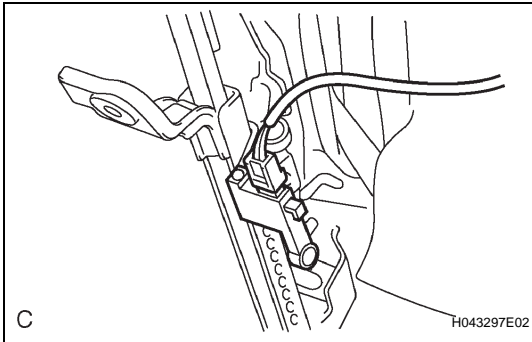**1. INSTALL SEAT POSITION AIRBAG SENSOR**

- (a) Connect the connector.
- (b) Install the sensor.
- (c) Using a T30 "torx" socket, install the screw.

Torque: 8.0 N*m (82 kgf*cm, 71 in.*lbf)

CAUTION:

- If the sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace the sensor with a new one.
- When installing the sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.

2. INSTALL FRONT SEAT ASSEMBLY

- (a) Install the front seat assembly (see page [SE-8](#)).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**4. CHECK SRS WARNING LIGHT**

- (a) Check the SRS warning light (see page [RS-18](#)).