


TIRE AND WHEEL SYSTEM

HOW TO PROCEED WITH TROUBLESHOOTING

1. FLOWCHART FOR VEHICLE PULL AND TIRE VIBRATION

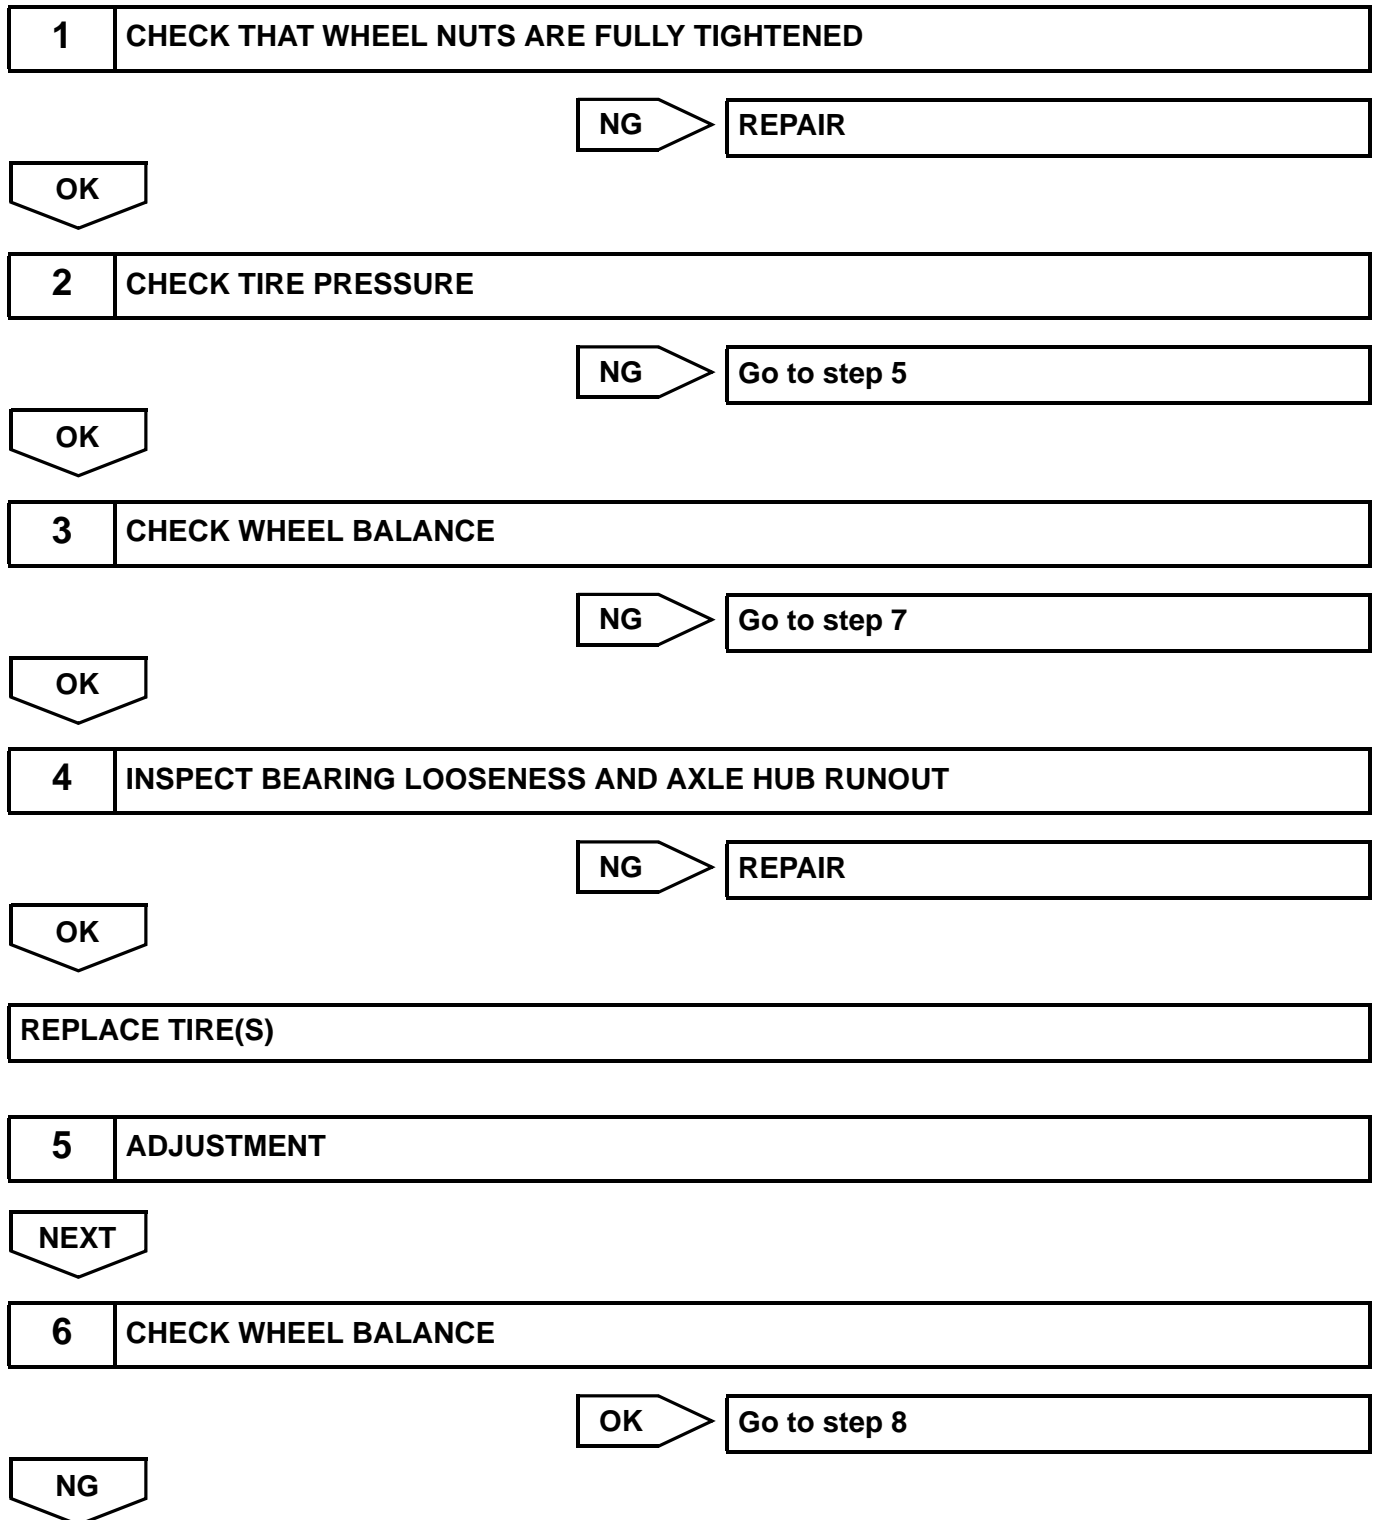

7 | ADJUSTMENT

NEXT

8 | INSPECT BEARING LOOSENESS AND AXLE HUB RUNOUT

NG → REPAIR

OK

RETURN VEHICLE TO CUSTOMER

2. FLOWCHART FOR IRREGULAR TIRE WEAR

1 | CHECK TIRE PRESSURE

NG → Go to step 3

OK

2 | CHECK WHEEL ALIGNMENT

NG → Go to step 5

OK

ROTATE TIRES OR REPLACE TIRE(S)

3 | ADJUSTMENT

NEXT

4 | CHECK WHEEL ALIGNMENT

NG → Go to step 5

OK

ROTATE TIRES OR REPLACE TIRE(S)

TW

5

ADJUSTMENT

NEXT

ROTATE TIRES OR REPLACE TIRE(S)