


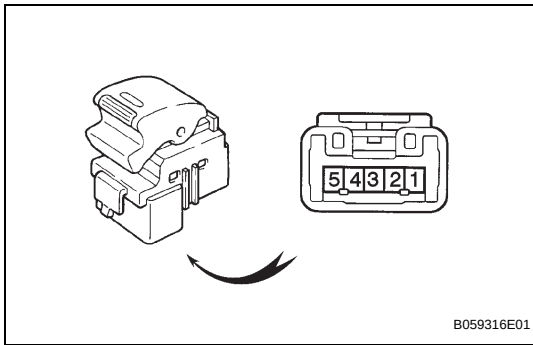

## FRONT PASSENGER SIDE POWER WINDOW SWITCH

### INSPECTION

#### 1. INSPECT POWER WINDOW REGULATOR SWITCH ASSEMBLY

- (a) Measure the resistance between each terminal of the connector when the switch is operated.

##### Standard resistance

| Tester Connection                | Switch Condition | Specified Condition |
|----------------------------------|------------------|---------------------|
| 1 (D) - 2 (SD)<br>3 (U) - 4 (B)  | UP               | Below 1 $\Omega$    |
| 1 (D) - 2 (SD)<br>3 (U) - 5 (SU) | OFF              | Below 1 $\Omega$    |
| 1 (D) - 4 (B)<br>3 (U) - 5 (SU)  | DOWN             | Below 1 $\Omega$    |

If the result is not as specified, replace the regulator switch assembly.