



# REAR POWER WINDOW SWITCH INSPECTION

## 1. INSPECT POWER WINDOW REGULATOR SWITCH ASSEMBLY (REAR LH AND REAR RH)

- (a) Measure the resistance between each terminal of the connector when the switch is operated.

### Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 (D) - 2 (SD) 3 (U) - 4 (B)	UP	Below 1 Ω
1 (D) - 2 (SD) 3 (U) - 5 (SU)	OFF	Below 1 Ω
1 (D) - 4 (B) 3 (U) - 5 (SU)	DOWN	Below 1 Ω

If the result is not as specified, replace the regulator switch assembly.