


BACK DOOR GLASS

COMPONENTS

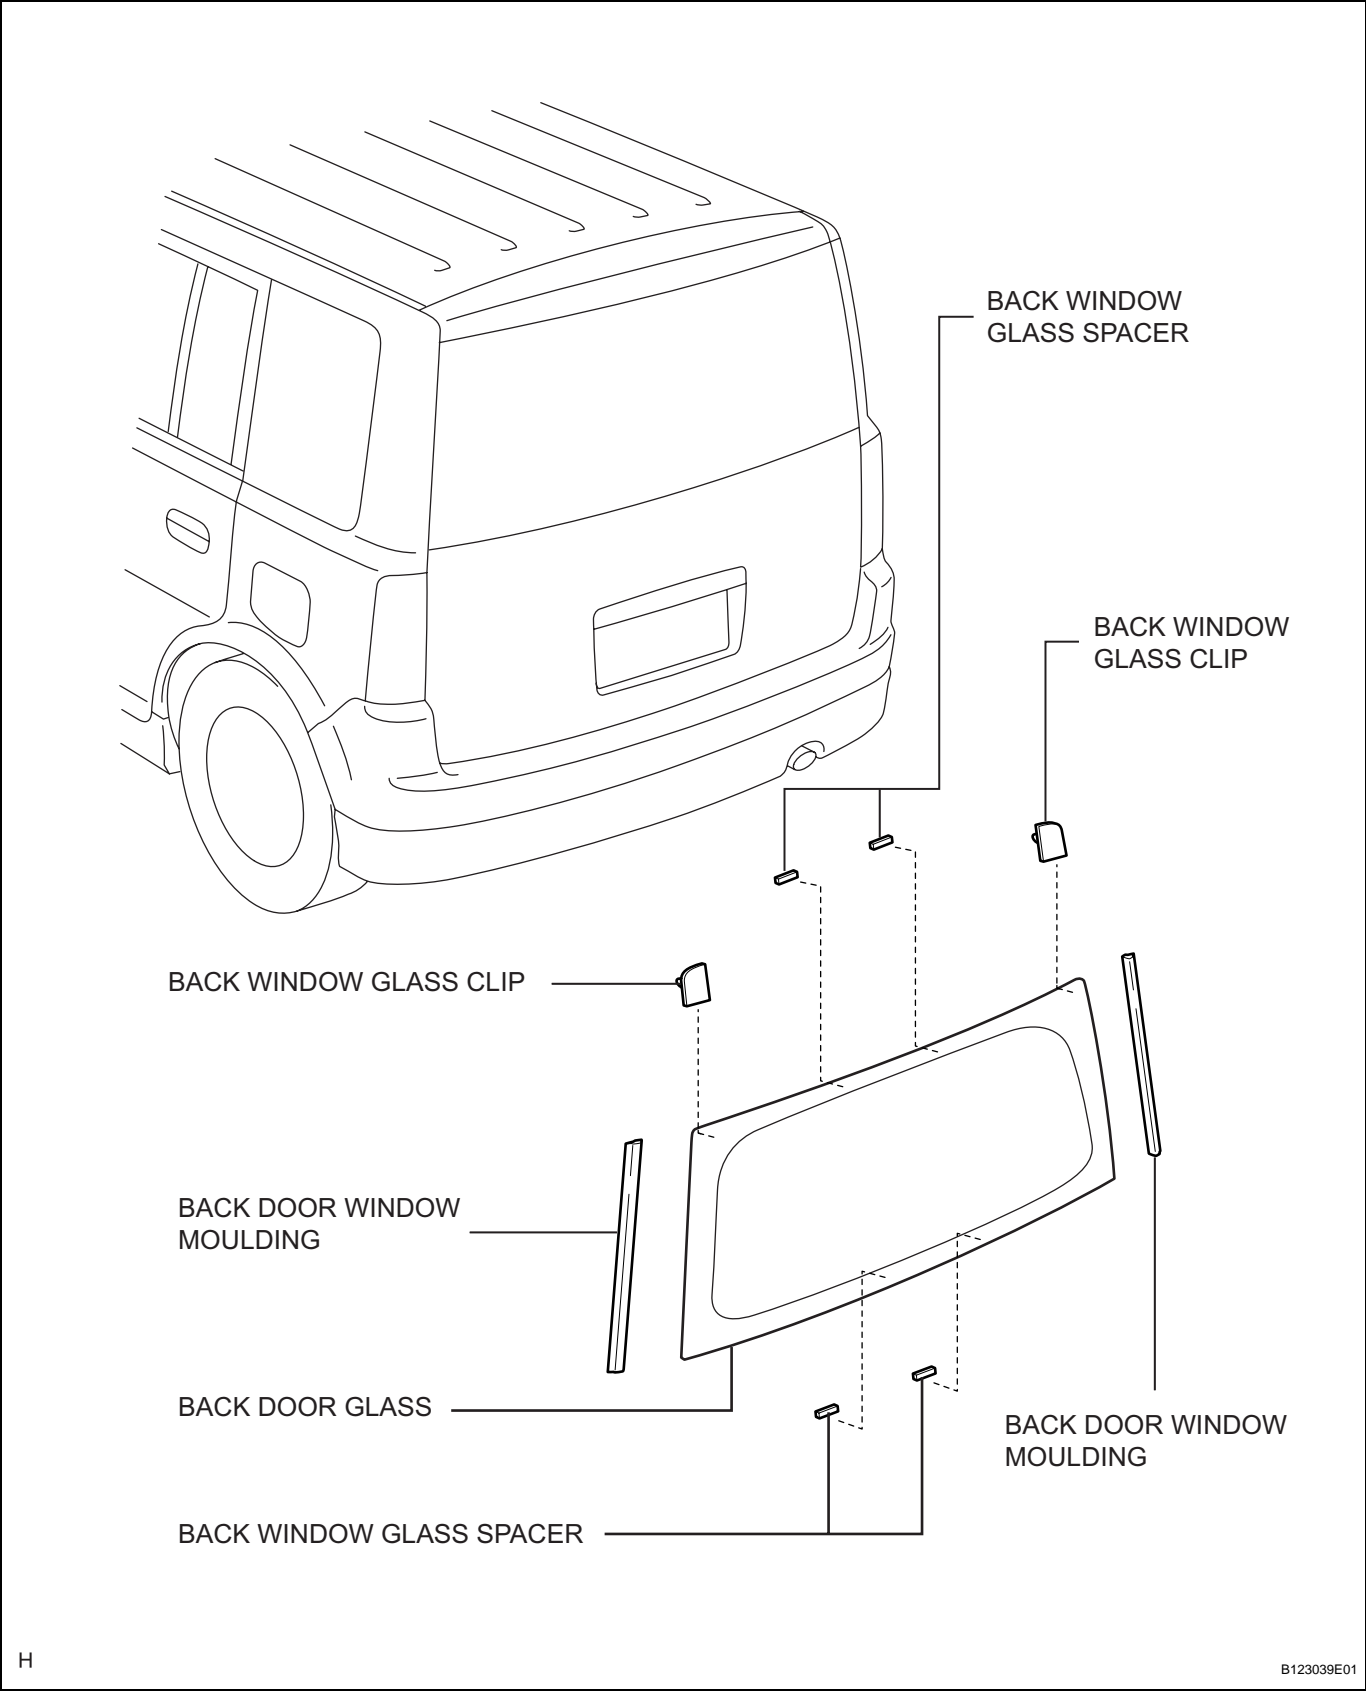

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:



Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE BACK DOOR GLASS

- (a) Apply protective tape to the outer surface of the vehicle body to prevent scratches.

NOTICE:

When separating the back door glass from the vehicle, be careful not to damage the vehicle's paint or interior/exterior ornaments.

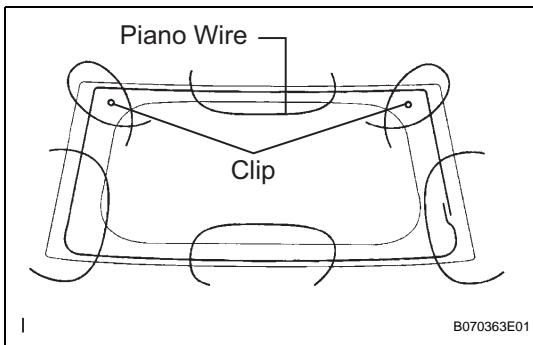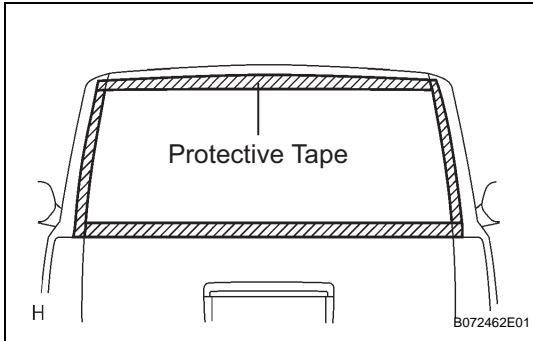

- (b) From the interior, insert a piano wire between the vehicle body and back door glass as shown in the illustration.
- (c) Tie objects that can serve as handles (for example, wooden blocks) to all wire ends.
- (d) Cut through the adhesive by pulling the piano wire around the back door glass.

NOTICE:

Leave as much adhesive on the vehicle body as possible when removing the back door glass.


- (e) Using suction cups, remove the back door glass.

3. CLEAN BACK DOOR GLASS

- (a) Clean the outer edge of the back door glass with white gasoline.

NOTICE:

- Do not touch the back door glass surface after cleaning it.
- Be careful not to damage the glass.
- Even if using new back door glass, clean the back door glass with white gasoline.

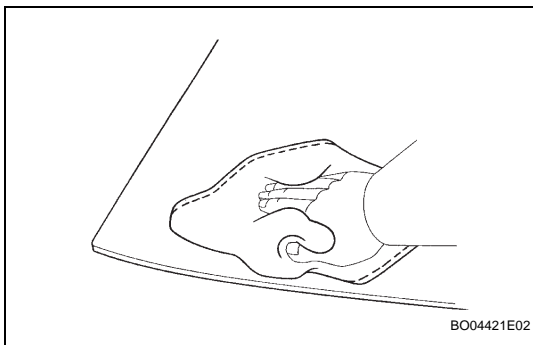

4. CLEAN VEHICLE BODY

- (a) Using a scraper, remove the moulding and adhesive from the back door glass.
- (b) Clean and shape the contact surface of the vehicle body.
- (1) On the contact surface of the vehicle body, use a knife to cut away excess adhesive as shown in the illustration.

HINT:

Leave as much adhesive on the vehicle body as possible.

NOTICE:

Be careful not to damage the vehicle body.

