

## SYSTEM DESCRIPTION

### 1. GENERAL

The defogger system's thin heater wires are attached to the inside of the rear window and defog the window surface quickly. The indicator light illuminates while the system is operating. The system automatically turns off after approximately 15 minutes.

## PROBLEM SYMPTOMS TABLE

**HINT:**

Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

**Window defogger system**

Symptom	Suspected area	See page
Rear window defogger does not operate (Indicator ON)	1. DEF fuse	<a href="#">WS-32</a>
	2. Defogger relay	<a href="#">WS-37</a>
	3. Rear window defogger wire	<a href="#">WS-38</a>
	4. Wire harness	
Rear window defogger does not operate (Indicator OFF)	1. DEF fuse	<a href="#">WS-32</a>
	2. Defogger relay	<a href="#">WS-37</a>
	3. Center cluster module switch	<a href="#">WS-35</a>
	4. Rear window defogger wire	<a href="#">WS-38</a>
	5. Wire harness	