

# WINDOW DEFOGGER SWITCH

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

**CAUTION:**


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE HEATER CONTROL KNOB** (See page [AC-99](#))
3. **REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER** (See page [IP-6](#))
4. **REMOVE CENTER CLUSTER MODULE SWITCH**

## INSPECTION

1. **INSPECT CENTER CLUSTER MODULE SWITCH (DEFOGGER SWITCH)**

- (a) Check operation of the defogger timer.
  - (1) Connect the battery's positive (+) lead to terminal 3 and the negative (-) lead to terminal 4.
  - (2) Connect a 1.4 W test bulb as shown in the illustration.
  - (3) Push the rear window defogger switch. Check that the switch and test bulb illuminate for 12 to 18 minutes, and then check that they go off. If the result is not as specified, replace the switch.

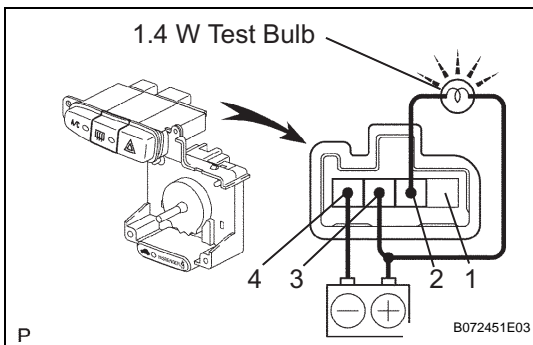

## INSTALLATION

1. INSTALL CENTER CLUSTER MODULE SWITCH
2. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER (See page [IP-12](#))
3. INSTALL HEATER CONTROL KNOB (See page [IP-13](#))
4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL