

POWER RELAY

ON-VEHICLE INSPECTION

1. REMOVE POWER RELAY (Marking: POWER)
- (a) Remove the power relay from the instrument panel junction block.
2. INSPECT POWER RELAY
- (a) Measure the resistance of the relay.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (When battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

3. INSTALL POWER RELAY

