

DEFOGGER RELAY

ON-VEHICLE INSPECTION

1. REMOVE DEFOGGER RELAY

- Remove the defogger relay from the instrument panel junction block.

2. INSPECT DEFOGGER RELAY

- Measure the resistance of the relay.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 k Ω or higher
	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

3. INSTALL DEFOGGER RELAY

