REMOVAL

HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the RH side.
- 1. REMOVE REAR SEATBACK ASSEMBLY RH (See page SE-12)
- 2. REMOVE REAR SEATBACK ASSEMBLY LH (See page SE-12)
- 3. REMOVE REAR SEAT CUSHION WITH COVER PAD SUB-ASSEMBLY (See page SE-12)
- 4. REMOVE CHILD RESTRAINT SEAT ANCHOR BRACKET SUB-ASSEMBLY (See page SE-12)
- 5. REMOVE REAR SEATBACK HINGE SUB-ASSEMBLY RH (See page SE-13)
- 6. REMOVE BACK DOOR WEATHERSTRIP
- 7. REMOVE REAR DOOR SCUFF PLATE RH (See page IR-6)
- 8. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH





- 9. REMOVE NO. 2 DECK BOARD
- 10. REMOVE NO. 1 DECK BOARD
- 11. REMOVE DECK FLOOR BOX RH
- 12. REMOVE DECK FLOOR BOX LH
- 13. REMOVE REAR DECK TRIM COVER (See page IR-11)
- 14. REMOVE REAR SEAT 3 POINT TYPE BELT ASSEMBLY OUTER RH (See page SB-23)
- 15. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (See page IR-7)
- 16. REMOVE ROOF SIDE GARNISH INNER RH (See page IR-7)
- 17. REMOVE QUARTER WINDOW ASSEMBLY


Apply protective tape to the outer surface of the vehicle body to prevent scratches.

 
NOTICE:

When separating the quarter window glass from the vehicle, be careful not to damage the vehicle's paint or interior/exterior ornaments.

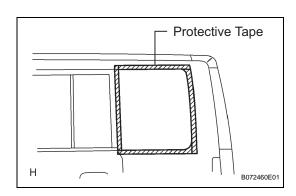

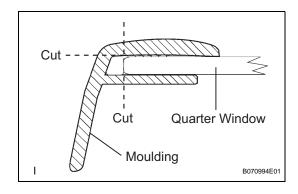

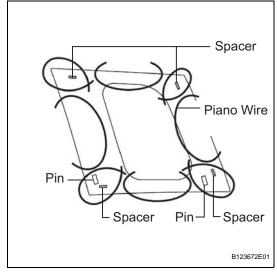



NOTICE:

Do not damage the body with the knife.

(b) Remove the remaining moulding.

HINT:


Make a partial cut in the moulding. Then, pull and remove it by hand.

- (c) From the interior, insert a piano wire between the vehicle body and the quarter window glass as shown in the illustration.
- (d) Tie objects that can serve as handles (for example, wooden blocks) to all wire ends.
- (e) Cut through the adhesive by pulling the piano wire around the quarter window glass.

NOTICE:

Leave as much adhesive on the vehicle body as possible when removing the quarter window glass.

(f) Using suction cups, remove the quarter window glass.

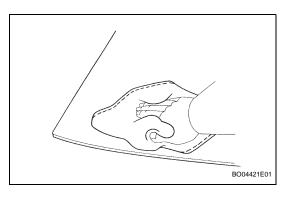

Vehicle Body -

Adhesive

B106081E09

Adhesive

0

18. CLEAN QUARTER WINDOW ASSEMBLY (a) Clean the outer edges of the glass with

(a) Clean the outer edges of the glass with white gasoline.

NOTICE:

- Do not touch the glass surface after cleaning it
- · Be careful not to damage the glass.
- Even if using new glass, clean the glass with white gasoline.



- (a) Clean and shape the contact surface of the vehicle body.
 - (1) On the contact surface of the vehicle body, use a knife to cut away excess adhesive as shown in the illustration.

HINT:

Leave as much adhesive on the vehicle body as possible.

NOTICE:

Be careful not to damage the vehicle body.

(2) Clean the contact surface of the vehicle body with cleaner.

HINT:

Even if all the adhesive has been removed, clean the vehicle body.

