







INSTALLATION

- 1. INSTALL REAR WIPER MOTOR ASSEMBLY
 - (a) Install the wiper motor with the 3 bolts. Torque: 5.4 N*m (55 kgf*cm, 47 in.*lbf)
 - (b) Connect the connector.

2. INSTALL REAR WIPER MOTOR GROMMET

- (a) Install the rear wiper motor grommet as shown in the illustration.
- 3. INSTALL REAR WIPER ARM AND BLADE ASSEMBLY
 - (a) Operate the wiper, and stop the wiper motor at the automatic stop position.
 - (b) Scrape off the serration part of the wiper arm with a round file or equivalent.
 - (c) Clean the wiper pivot serration with a wiper brush.

 (d) Install the wiper arm with the nut in the position as shown in the illustration.
Torque: 5.4 N*m (55 kgf*cm, 47 in.*lbf) HINT:

Hold down the arm hinge by hand in order fasten the nut.

(e) Operate the wiper while running water or washer fluid over the window, and check the wiping condition and that the rear wiper does not hit against the vehicle's body.



- 4. INSTALL BACK DOOR TRIM BOARD (See page ED-41)
- 5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

WW