

O : Parts Location

l	Code	See Page	Code	See Page	Code	See Page
-	R5	31	R16	33	R17	33

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1L	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)	
IC2	35	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)	
IG2 35 Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)		Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)	

: Ground Points

Code	See Page	Ground Points Location
IE	35	Left Kick Panel