



Two Way Flow Heater

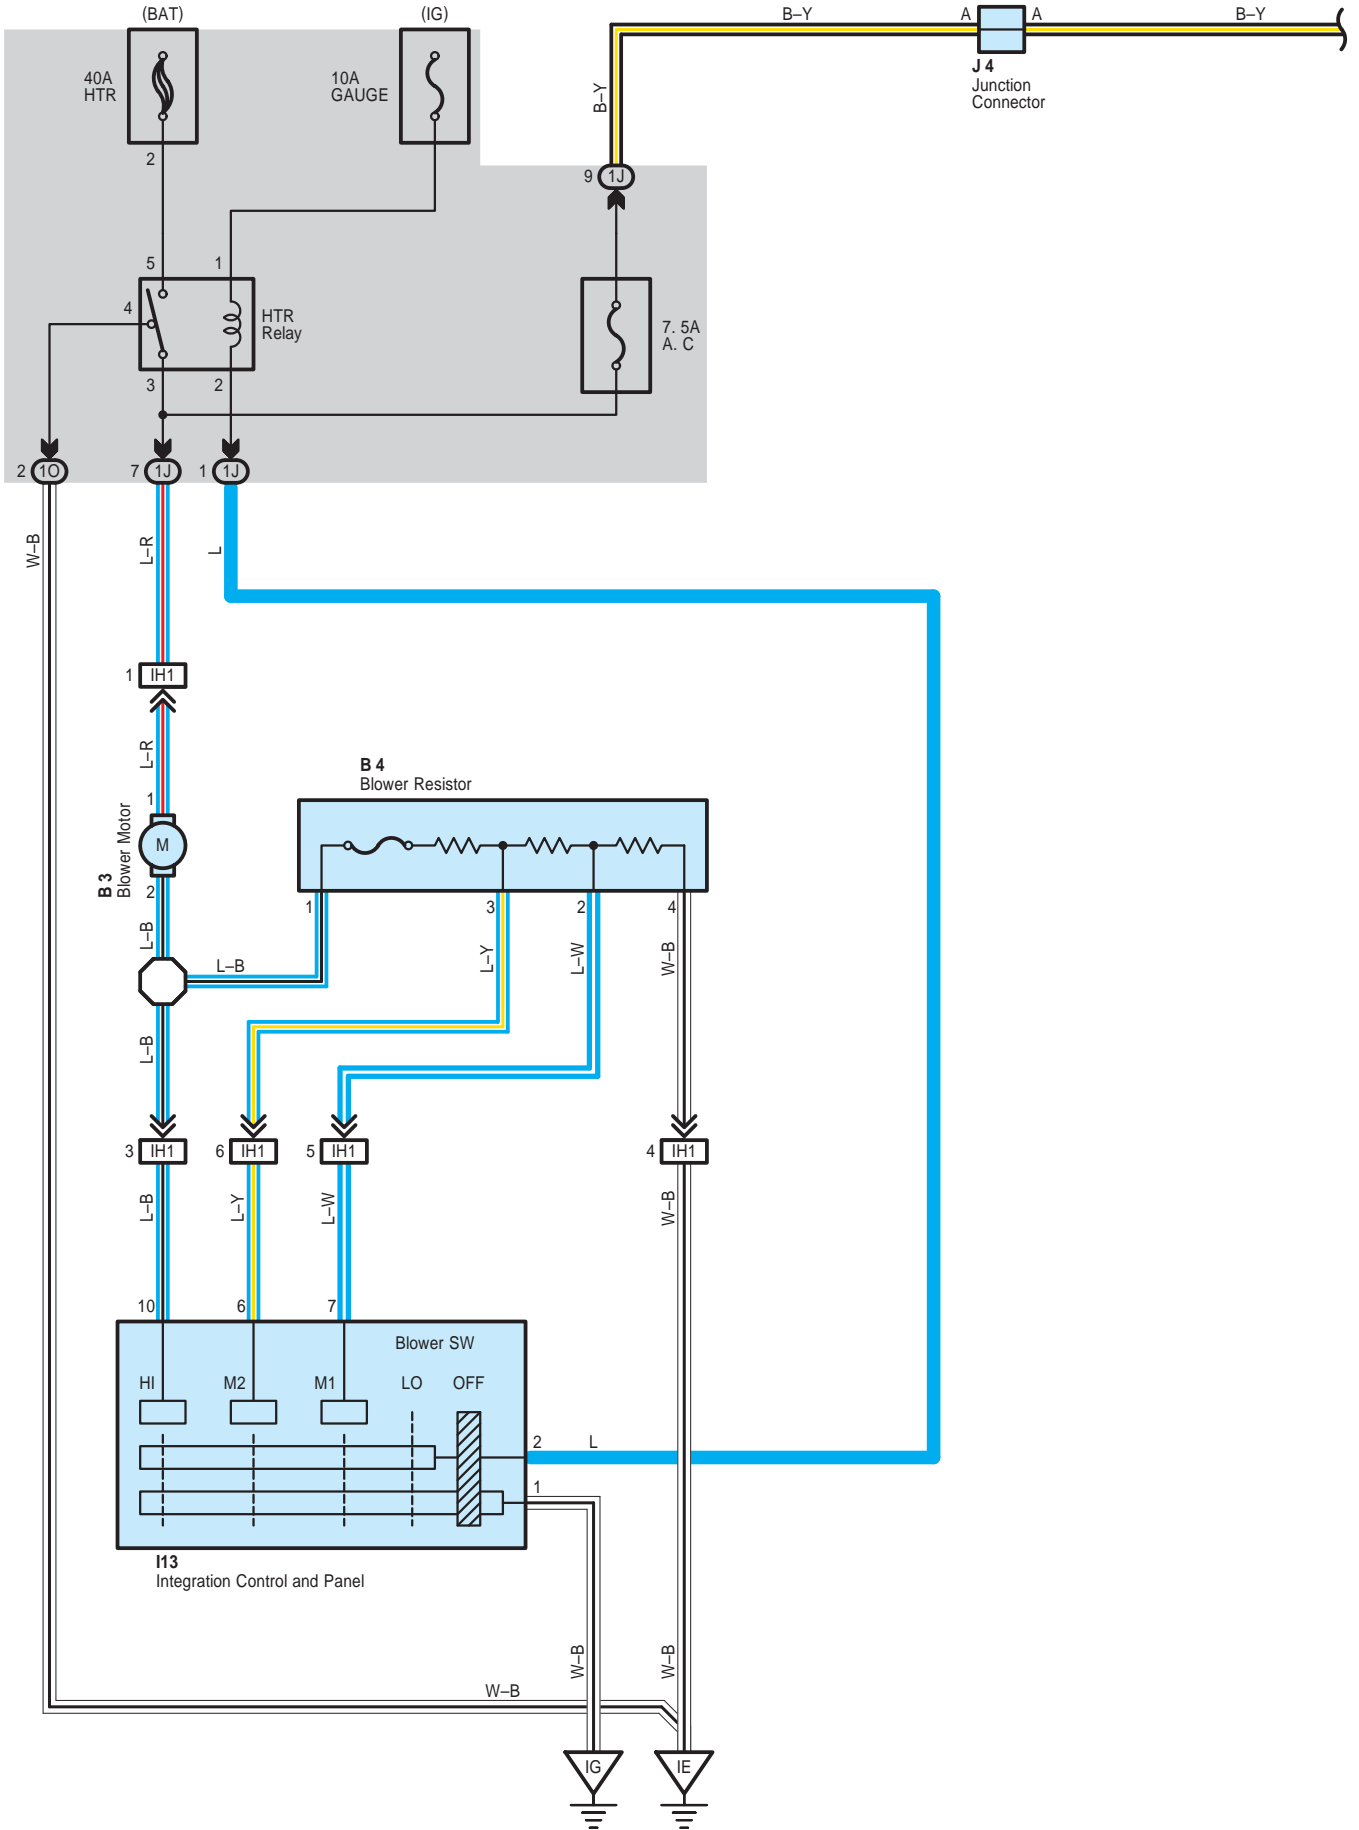

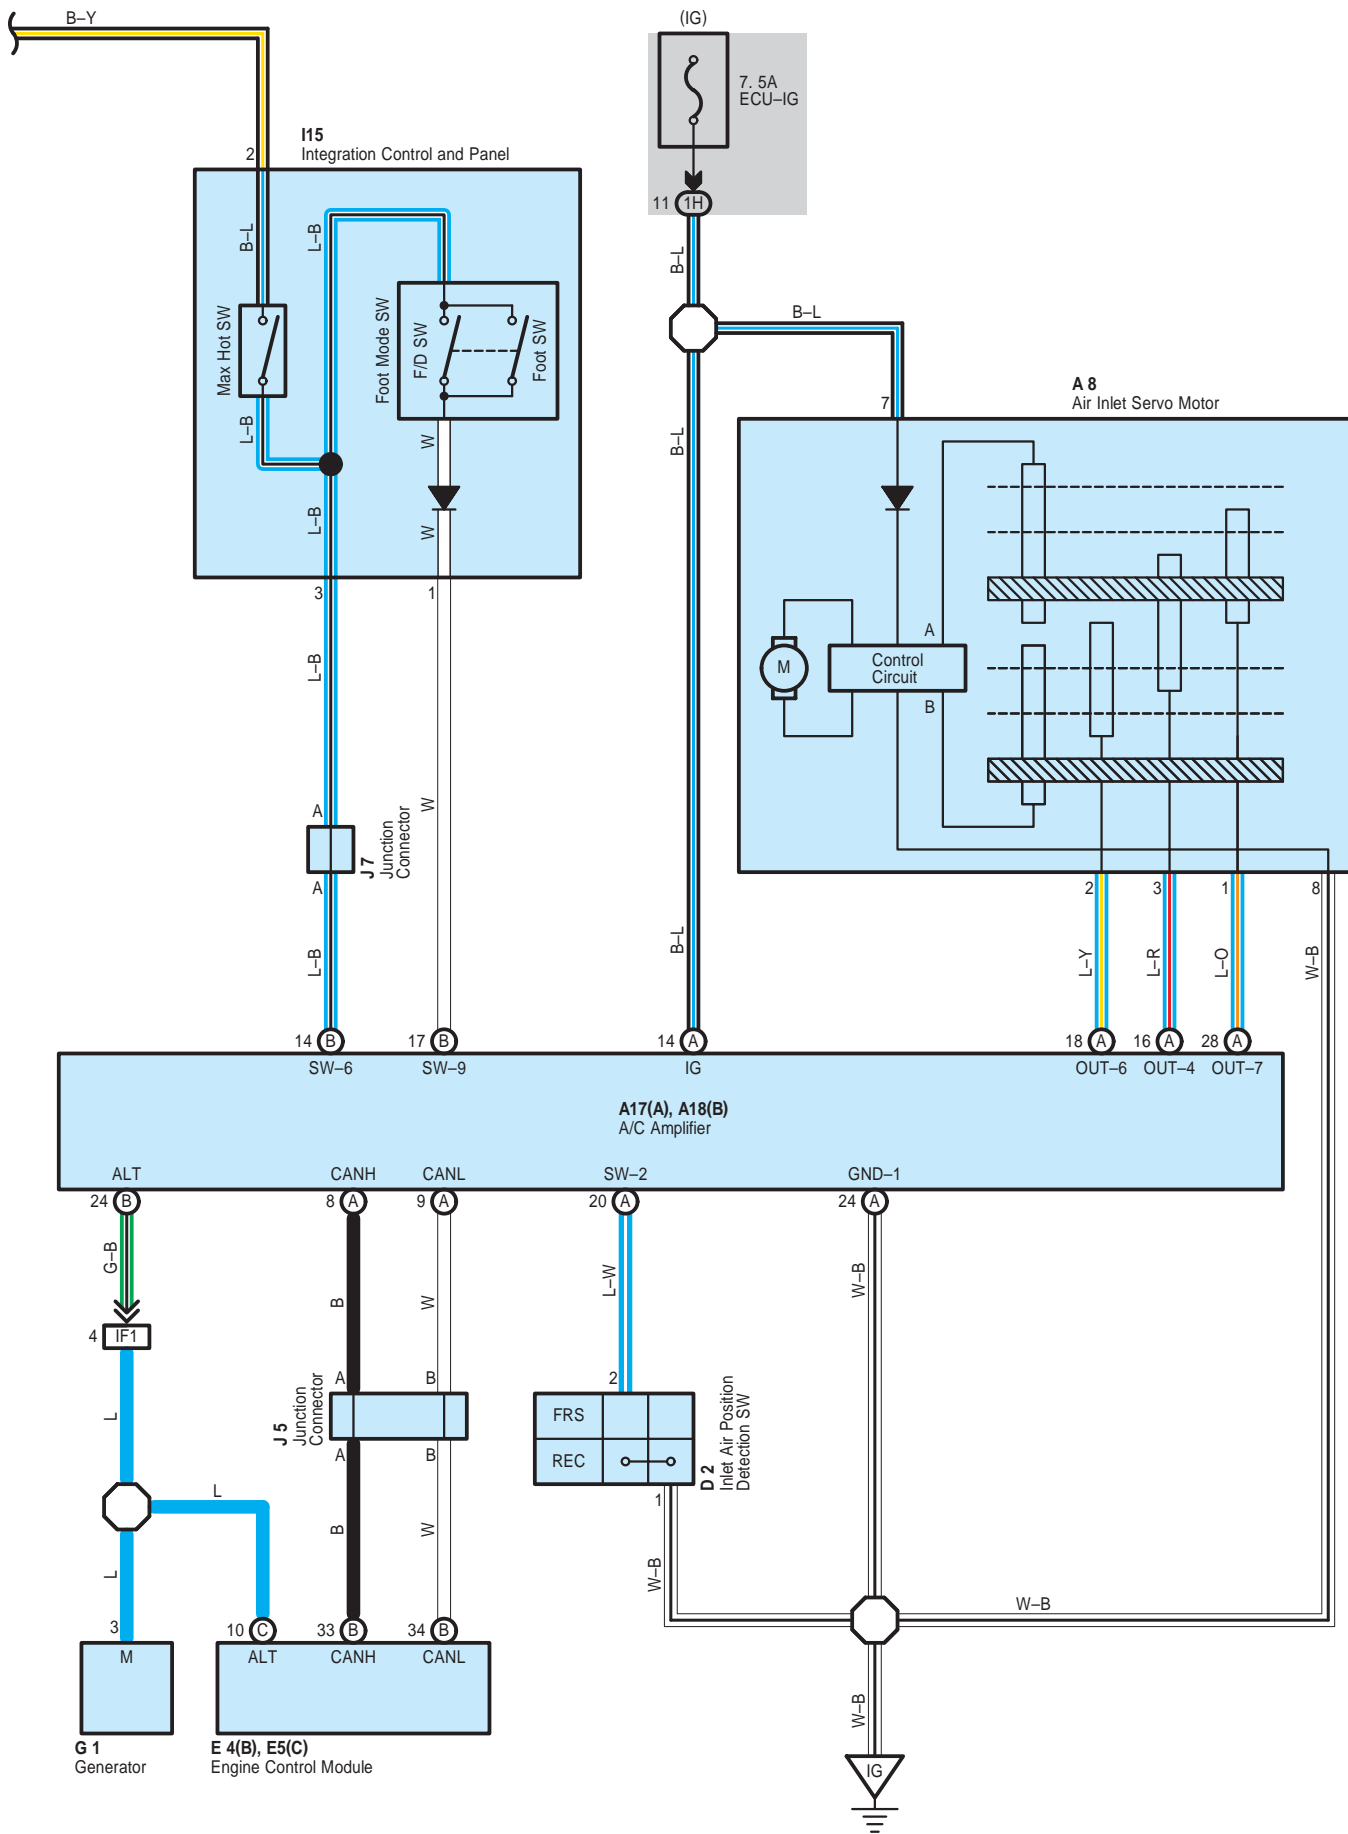

Two Way Flow Heater

System Outline

When all of the following conditions are met, the recirculation/fresh air inlet damper is switched to the DUAL MODE position.

- * The recirculation/fresh air switch is at FRESH position
- * The blower SW is on.
- * The max hot SW is on.
- * The foot mode SW is at FOOT or F/D position.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	30	D2	30	I15	30
A17	A 30	E4	B 30	J4	31
A18	B 30	E5	C 30	J5	31
B3	30	G1	28	J7	31
B4	30	I13	30		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1J		
1O		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	35	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IH1	35	Instrument Panel Wire and A/C Sub Wire (Right Side of A/C Unit)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	35	Left Kick Panel
IG	35	Right Kick Panel

