



J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

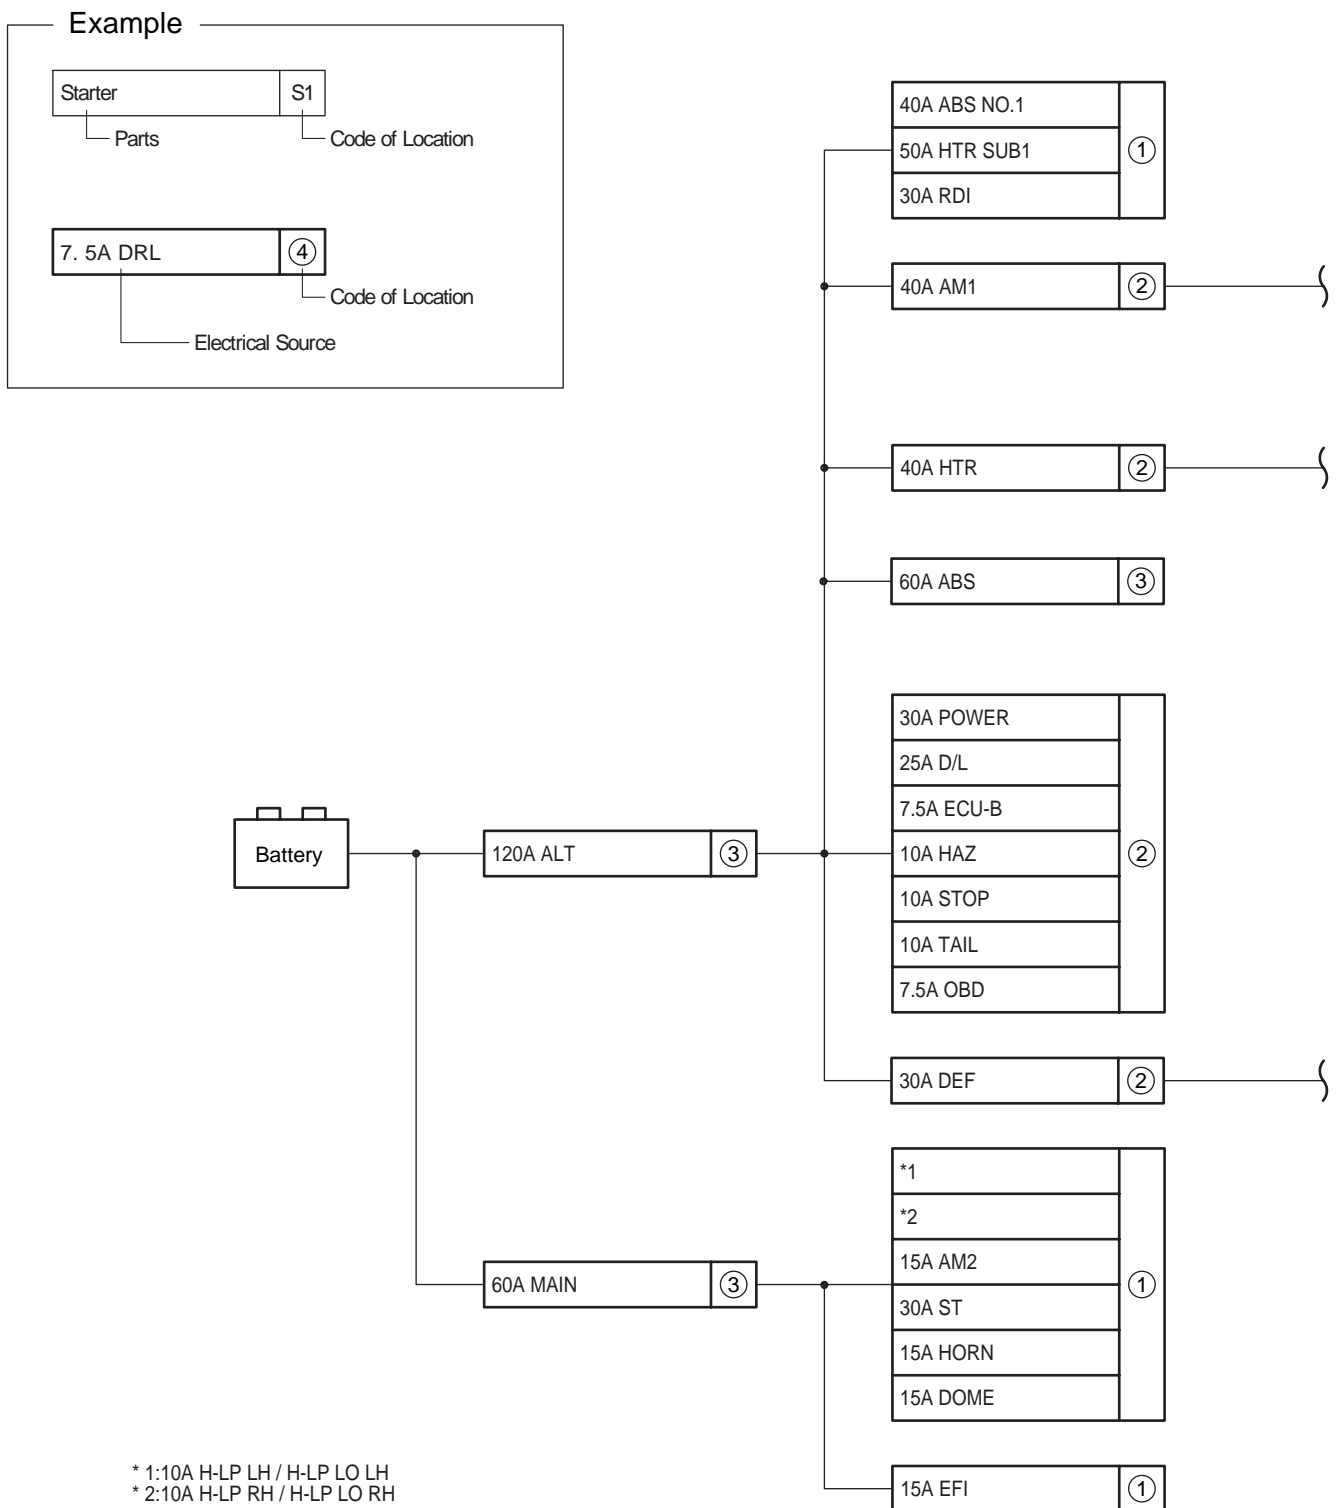

[LOCATION]

- ① : Engine Room R/B (See Page 22)
- ② : Instrument Panel J/B (See Page 24)
- ④ : Fuse Block (F15 on See Page 30)

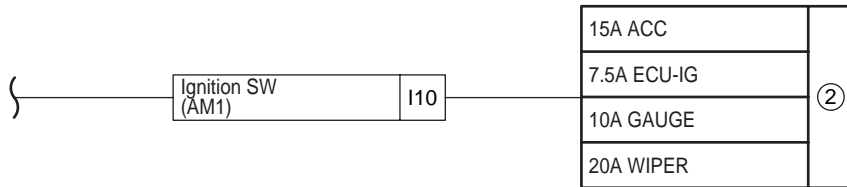

③ : Fusible Link Block (See Page 23)

J POWER SOURCE (Current Flow Chart)

Engine Room R/B (See Page 22)

Fuse		System	Page
7.5A	A/C	Air Conditioning	150
		PTC Heater	148
10A	H-LP LH/H-LP LO LH	Headlight	58
		Wireless Door Lock Control	90
10A	H-LP RH/H-LP LO RH	Headlight	58
		Wireless Door Lock Control	90
15A	AM2	ABS, TRAC and VSC	104
		Charging	46
		Combination Meter	136
		Electronically Controlled Transmission and A/T Indicator	98
		Engine Control	48
		SRS	113
		Starting and Ignition	42
15A	DOME	ABS, TRAC and VSC	104
		Audio System	132
		Combination Meter	136
		Door Lock Control	82
		Engine Control	48
		Headlight	58
		Interior Light	64
		Key Reminder and Seat Belt Warning	120
		Light Reminder	124
		SRS	113
		Taillight and Illumination	66
Wireless Door Lock Control	90		
15A	EFI	Electronically Controlled Transmission and A/T Indicator	98
		Engine Control	48
15A	HORN	Horn	128
		Wireless Door Lock Control	90
30A	RDI	Radiator Fan and Condenser Fan	142
30A	ST	Starting and Ignition	42
40A	ABS NO.1	ABS, TRAC and VSC	104
50A	HTR SUB1	PTC Heater	148

Instrument Panel J/B (See Page 24)

Fuse		System	Page
7.5A	A.C	Two Way Flow Heater	144
7.5A	ECU-B	ABS, TRAC and VSC	104
		Multiplex Communication System (CAN)	110
7.5A	ECU-IG	ABS, TRAC and VSC	104
		Air Conditioning	150
		Multiplex Communication System (CAN)	110

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
7.5A	ECU-IG	PTC Heater	148
		Radiator Fan and Condenser Fan	142
		Two Way Flow Heater	144
7.5A	OBD	Electronically Controlled Transmission and A/T Indicator	98
		Engine Control	48
10A	GAUGE	ABS, TRAC and VSC	104
		Air Conditioning	150
		Audio System	132
		Back-Up Light	72
		Charging	46
		Combination Meter	136
		Door Lock Control	82
		Electronically Controlled Transmission and A/T Indicator	98
		Engine Control	48
		Fog Light	60
		Key Reminder and Seat Belt Warning	120
		Light Reminder	124
		Power Window	78
		PTC Heater	148
		Rear Window Defogger	130
		Shift Lock	118
SRS	113		
Taillight and Illumination	66		
Turn Signal and Hazard Warning Light	62		
Two Way Flow Heater	144		
Wireless Door Lock Control	90		
10A	HAZ	Turn Signal and Hazard Warning Light	62
10A	STOP	ABS, TRAC and VSC	104
		Electronically Controlled Transmission and A/T Indicator	98
		Engine Control	48
		Shift Lock	118
		Stop Light	70
10A	TAIL	Engine Control	48
		Light Reminder	124
		Taillight and Illumination	66
15A	ACC	Audio System	132
		Cigarette Lighter	126
		Remote Control Mirror	122
20A	WIPER	Front Wiper and Washer	74
		Rear Wiper and Washer	76
25A	D/L	Door Lock Control	82
		Wireless Door Lock Control	90
30A	DEF	Rear Window Defogger	130
30A	POWER	Power Window	78

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
40A	HTR	Air Conditioning	150
		PTC Heater	148
		Two Way Flow Heater	144

Fusible Link Block (See Page 23)

Fuse		System	Page
60A	ABS	ABS, TRAC and VSC	104
60A	MAIN	ABS, TRAC and VSC	104
		Charging	46
		Combination Meter	136
		Electronically Controlled Transmission and A/T Indicator	98
		Engine Control	48
		SRS	113
120A	ALT	Starting and Ignition	42
		ABS, TRAC and VSC	104
		Charging	46

Fuse Block (F15 on See Page 30)

Fuse		System	Page
7.5A	I/UP	Rear Window Defogger	130

* These are the page numbers of the first page on which the related system is shown.

