



F RELAY LOCATIONS

[Engine Compartment]

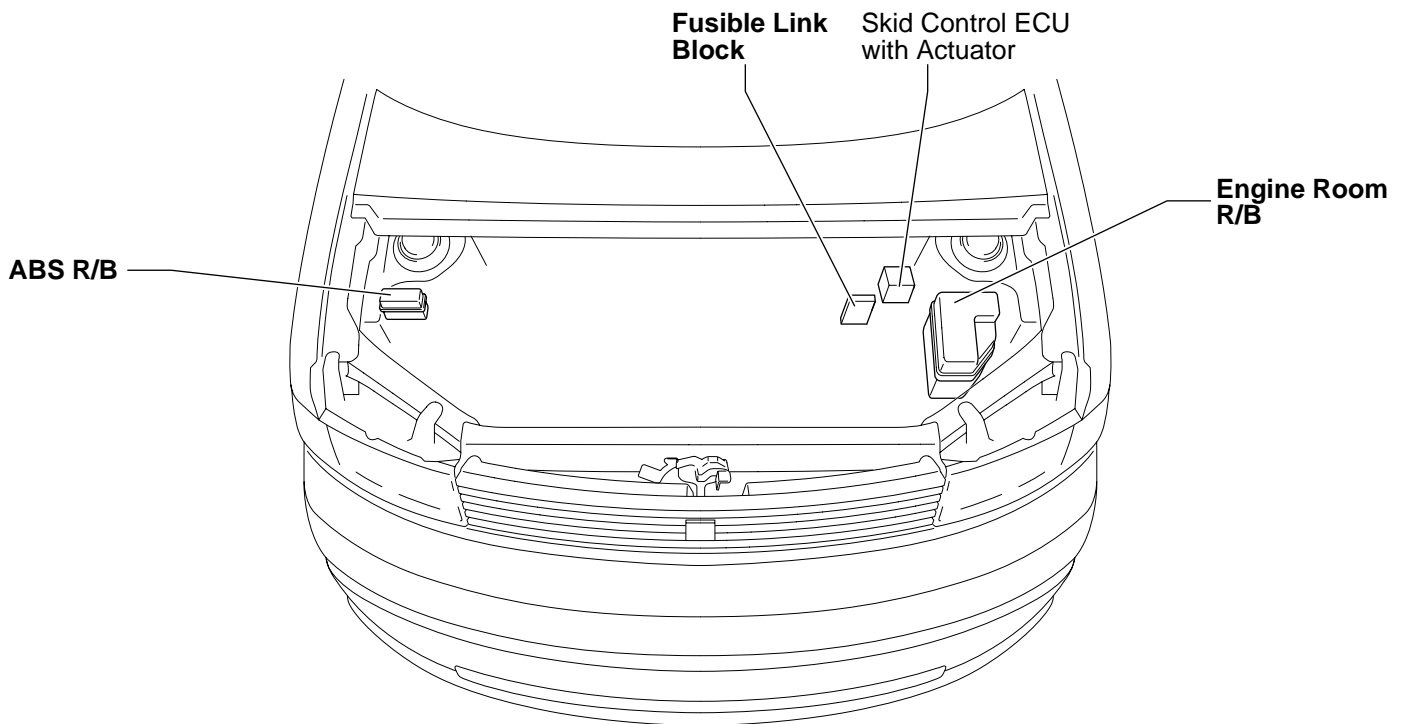


[Instrument Panel]

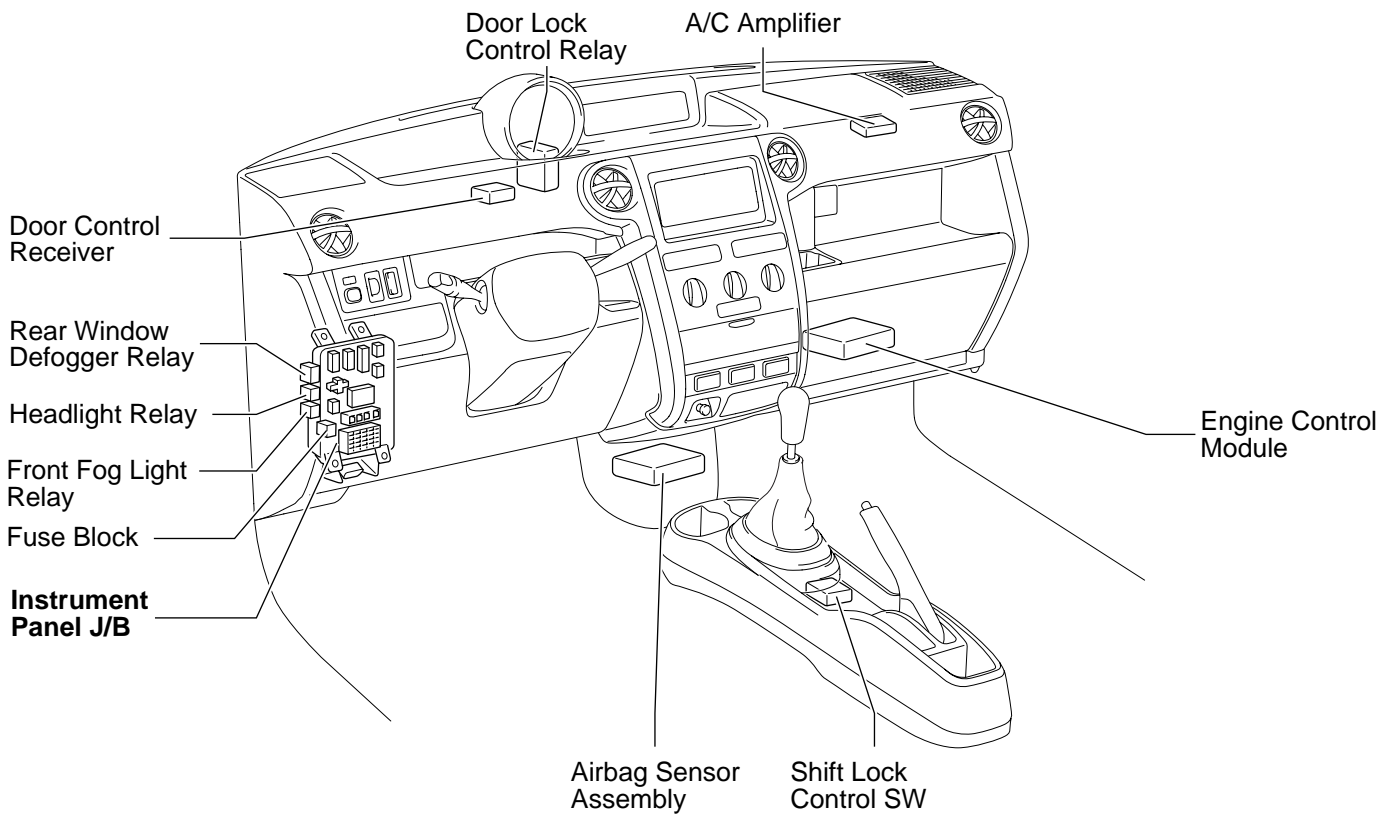


F RELAY LOCATIONS

① : Engine Room R/B Engine Compartment Left (See Page 20)

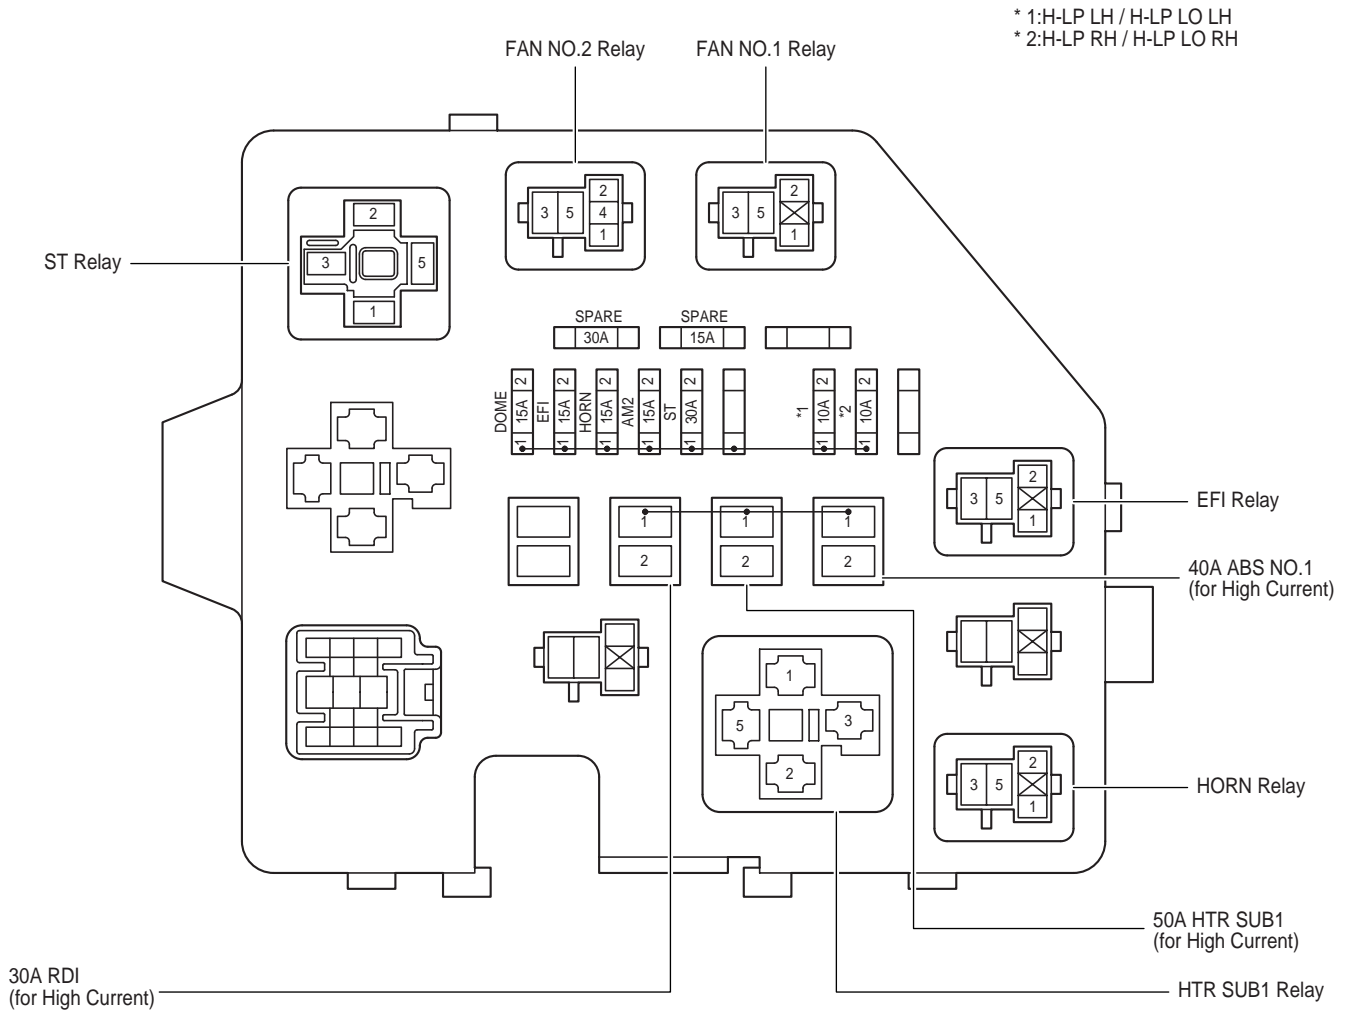


Fusible Link Block

Engine Compartment Left (See Page 20)

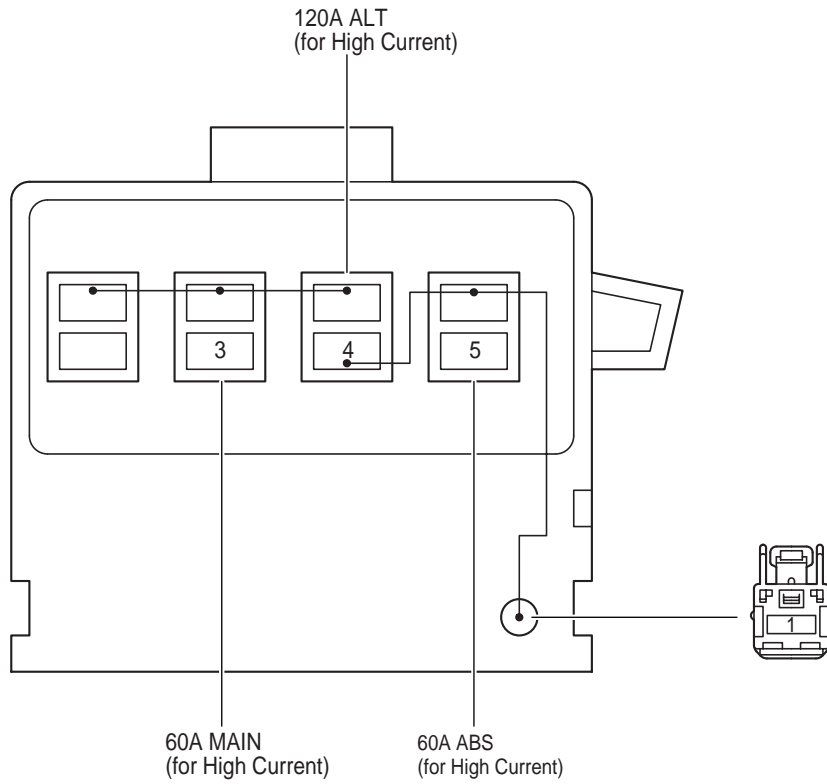


② : ABS R/B


Engine Compartment Right (See Page 20)

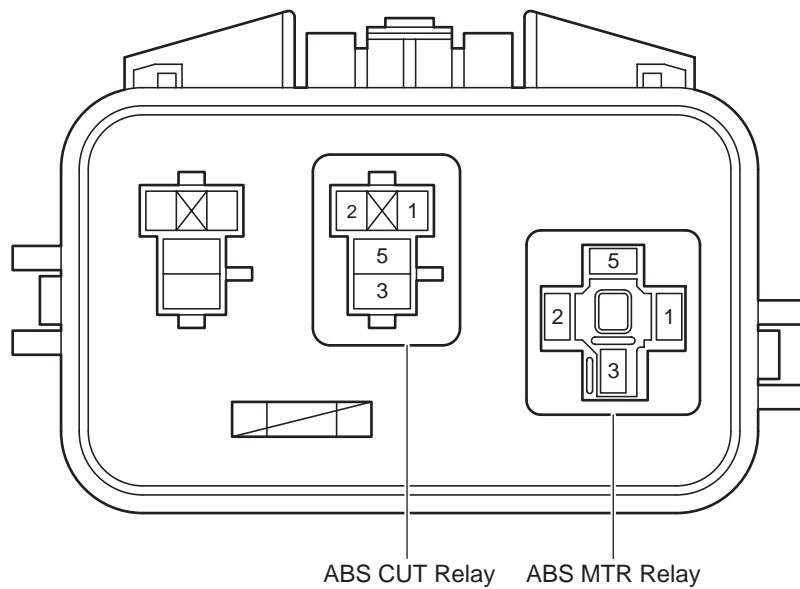

F RELAY LOCATIONS


 : Instrument Panel J/B  Lower Finish Panel (See Page 21)

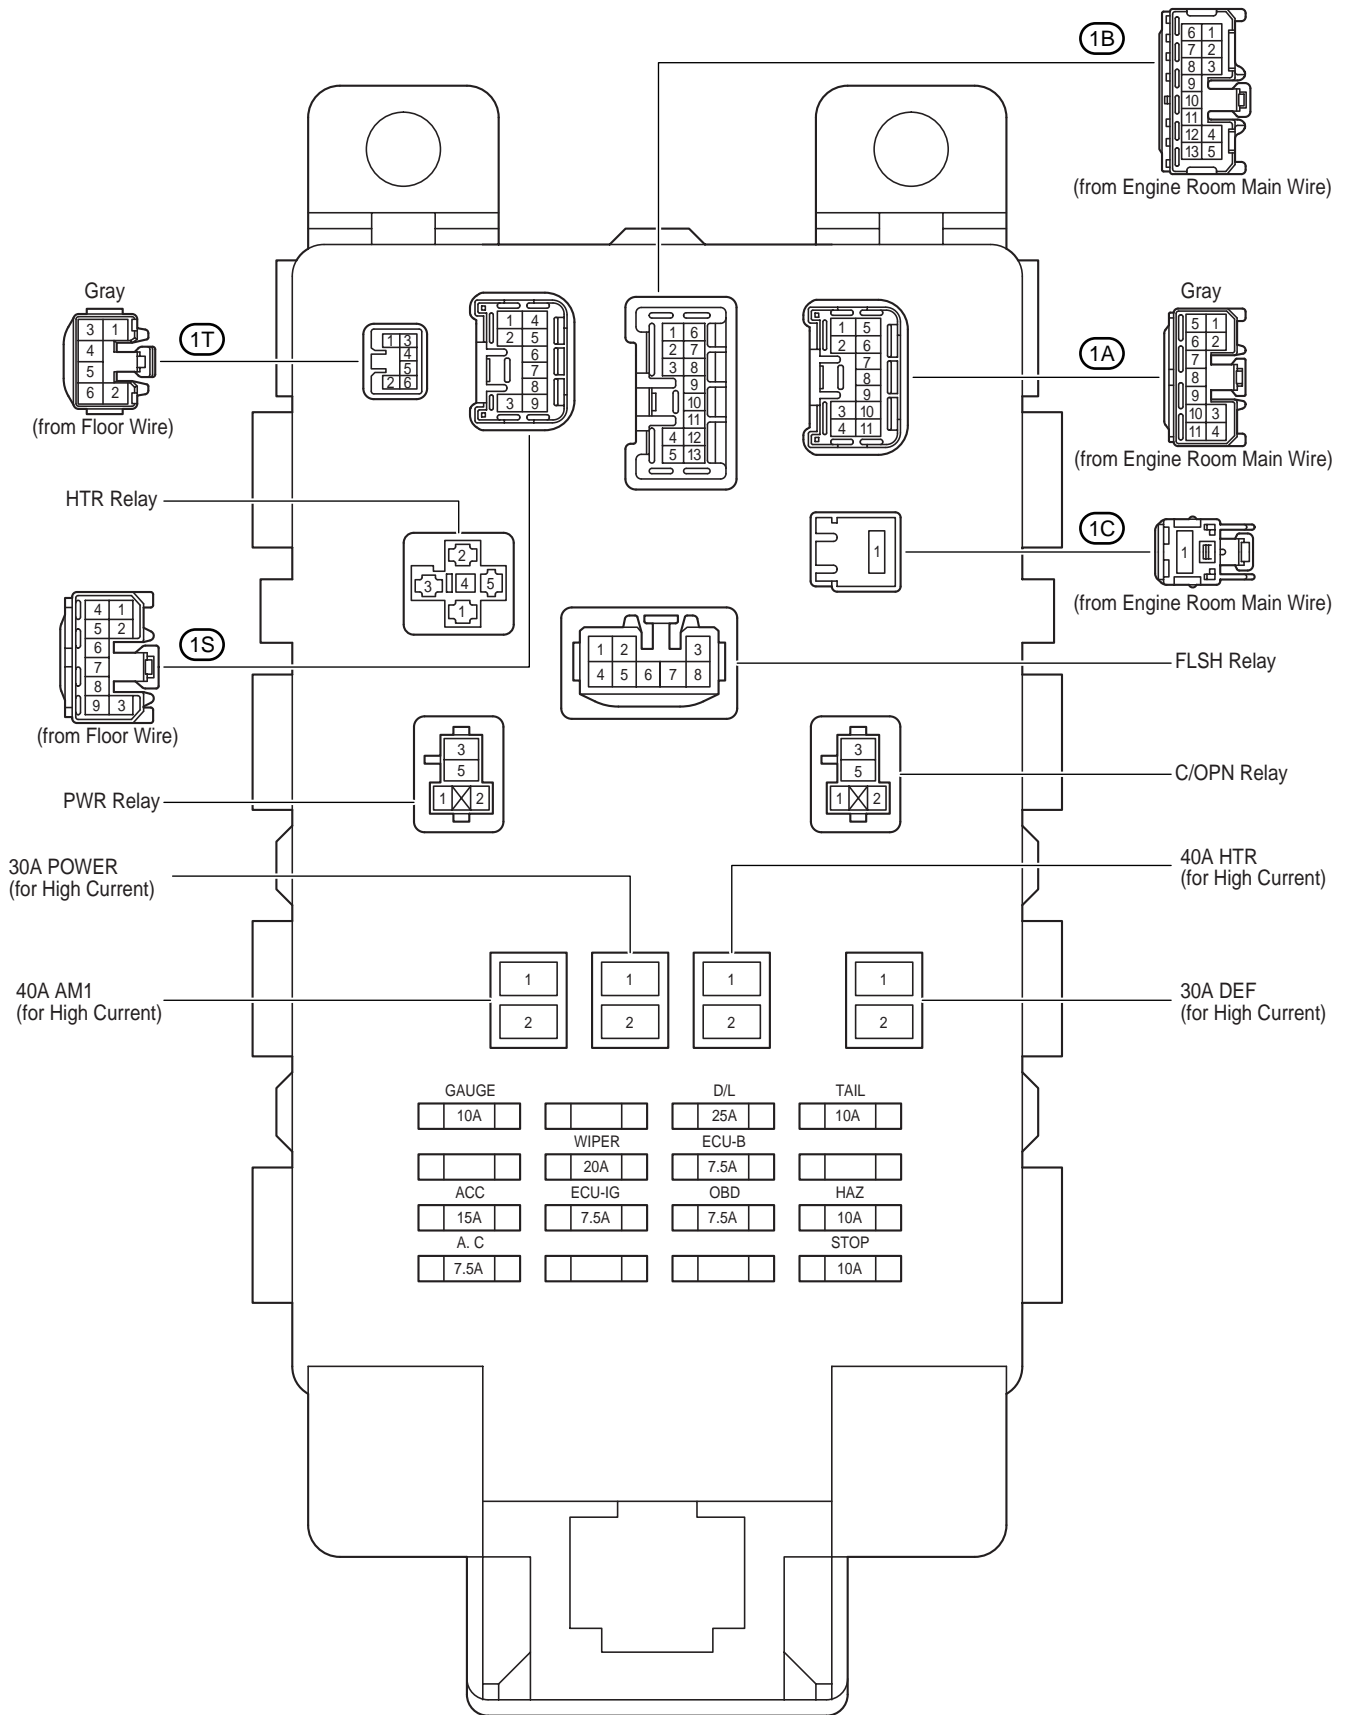

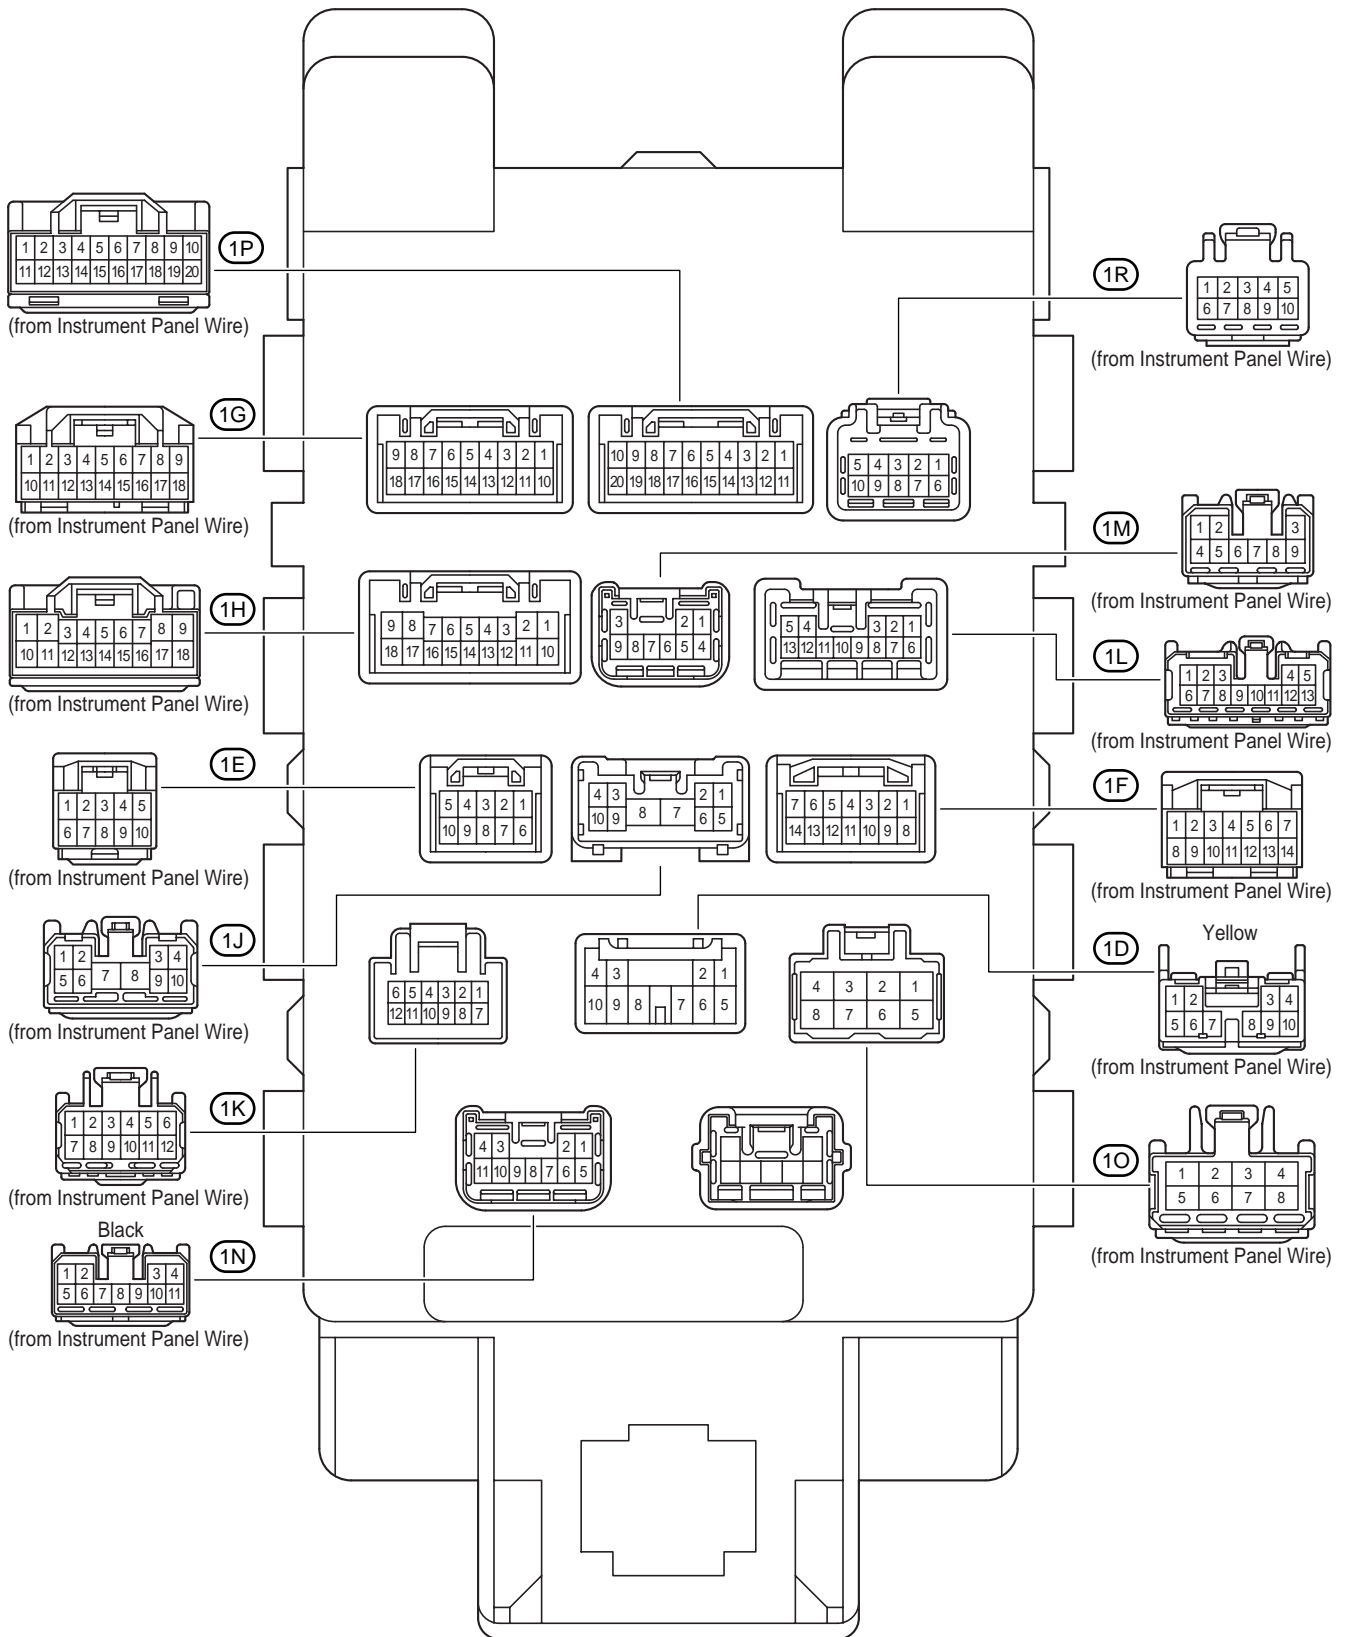

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

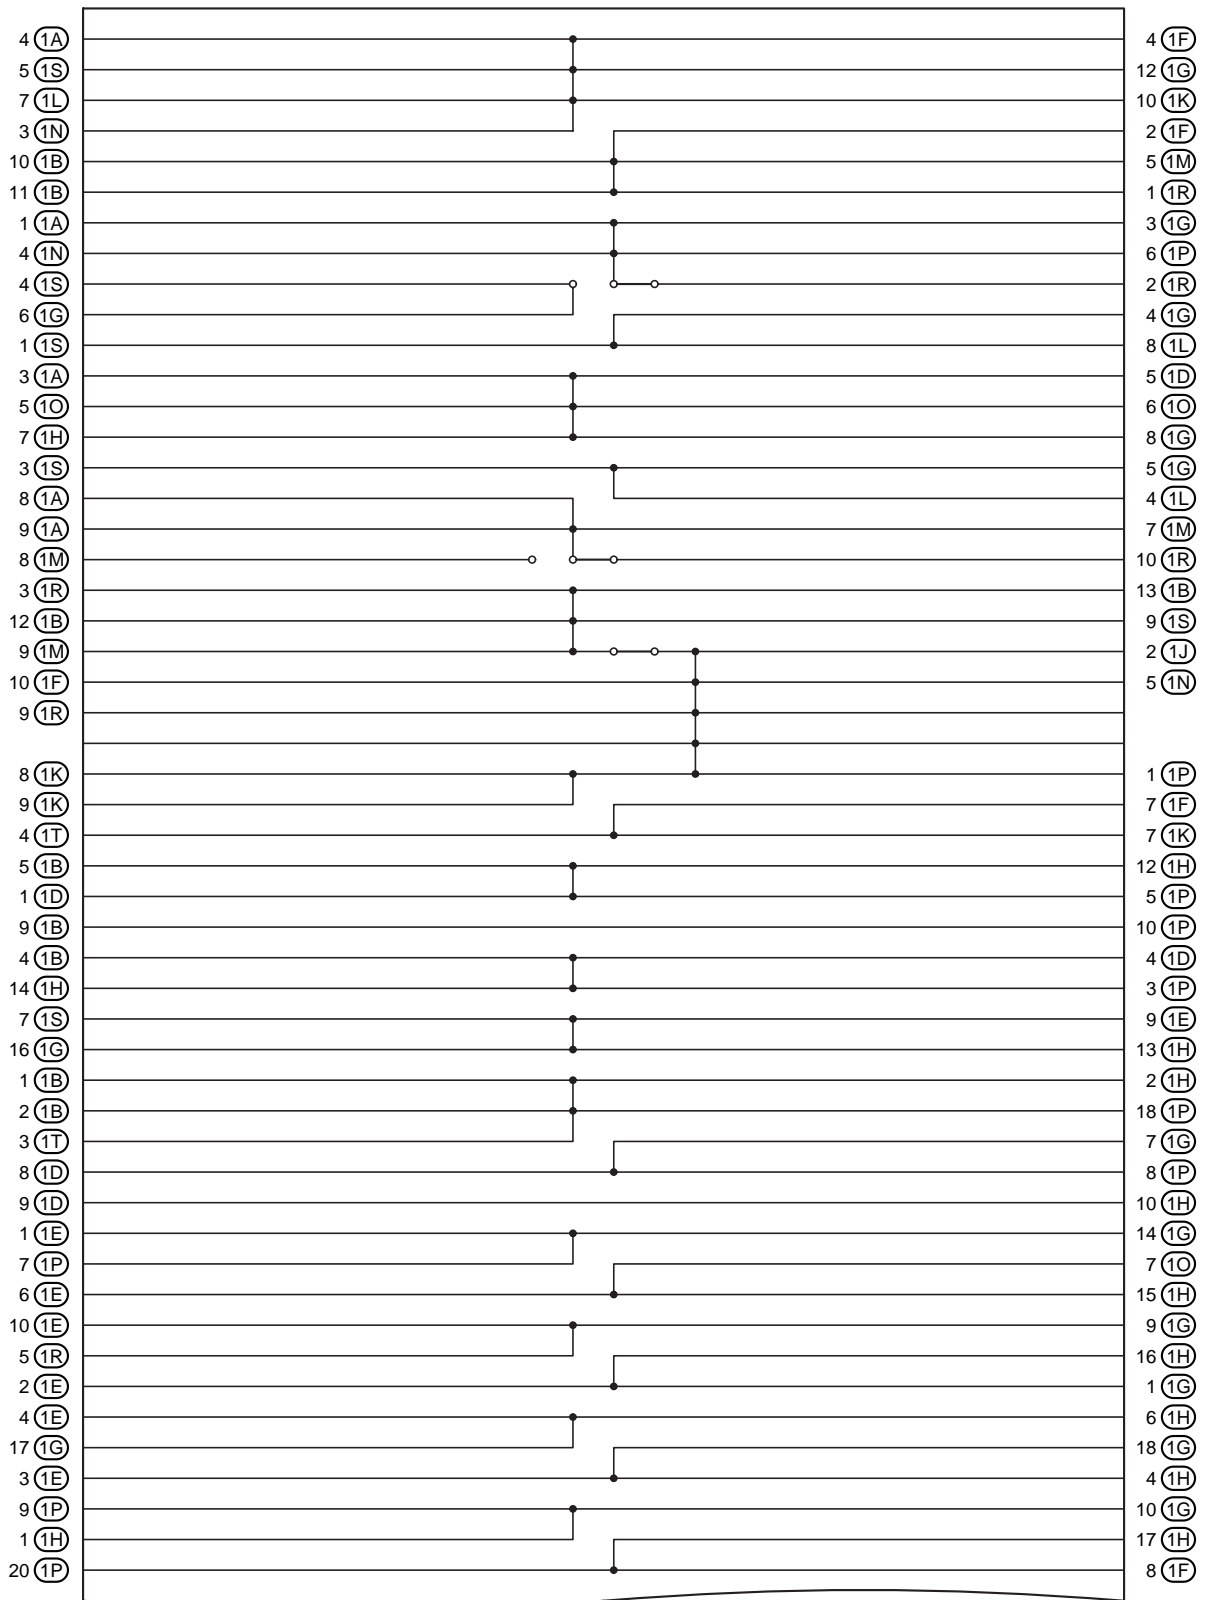

(Cont. next page)

(Cont'd)

