



# Starting and Ignition

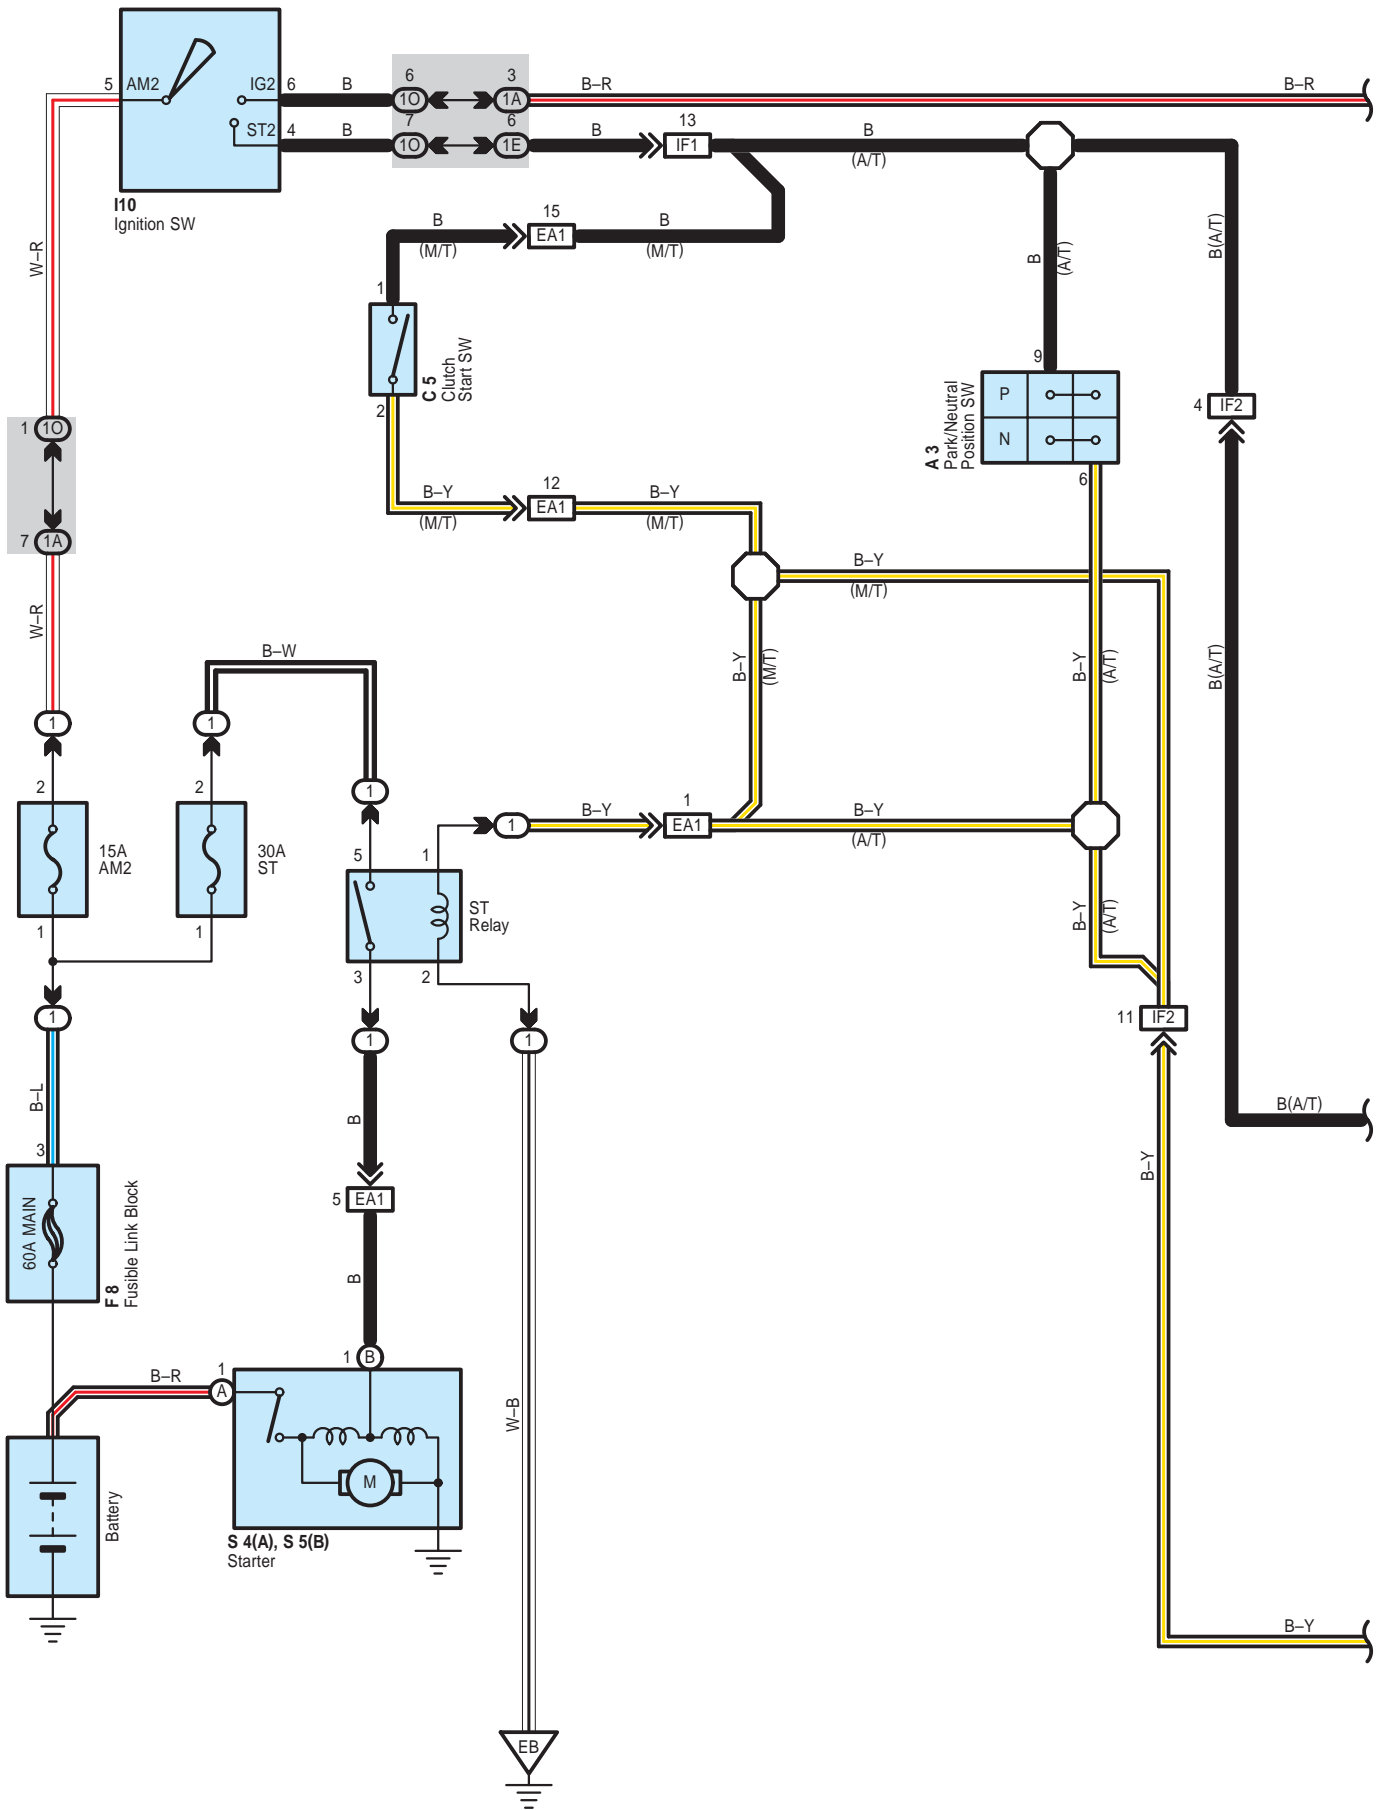

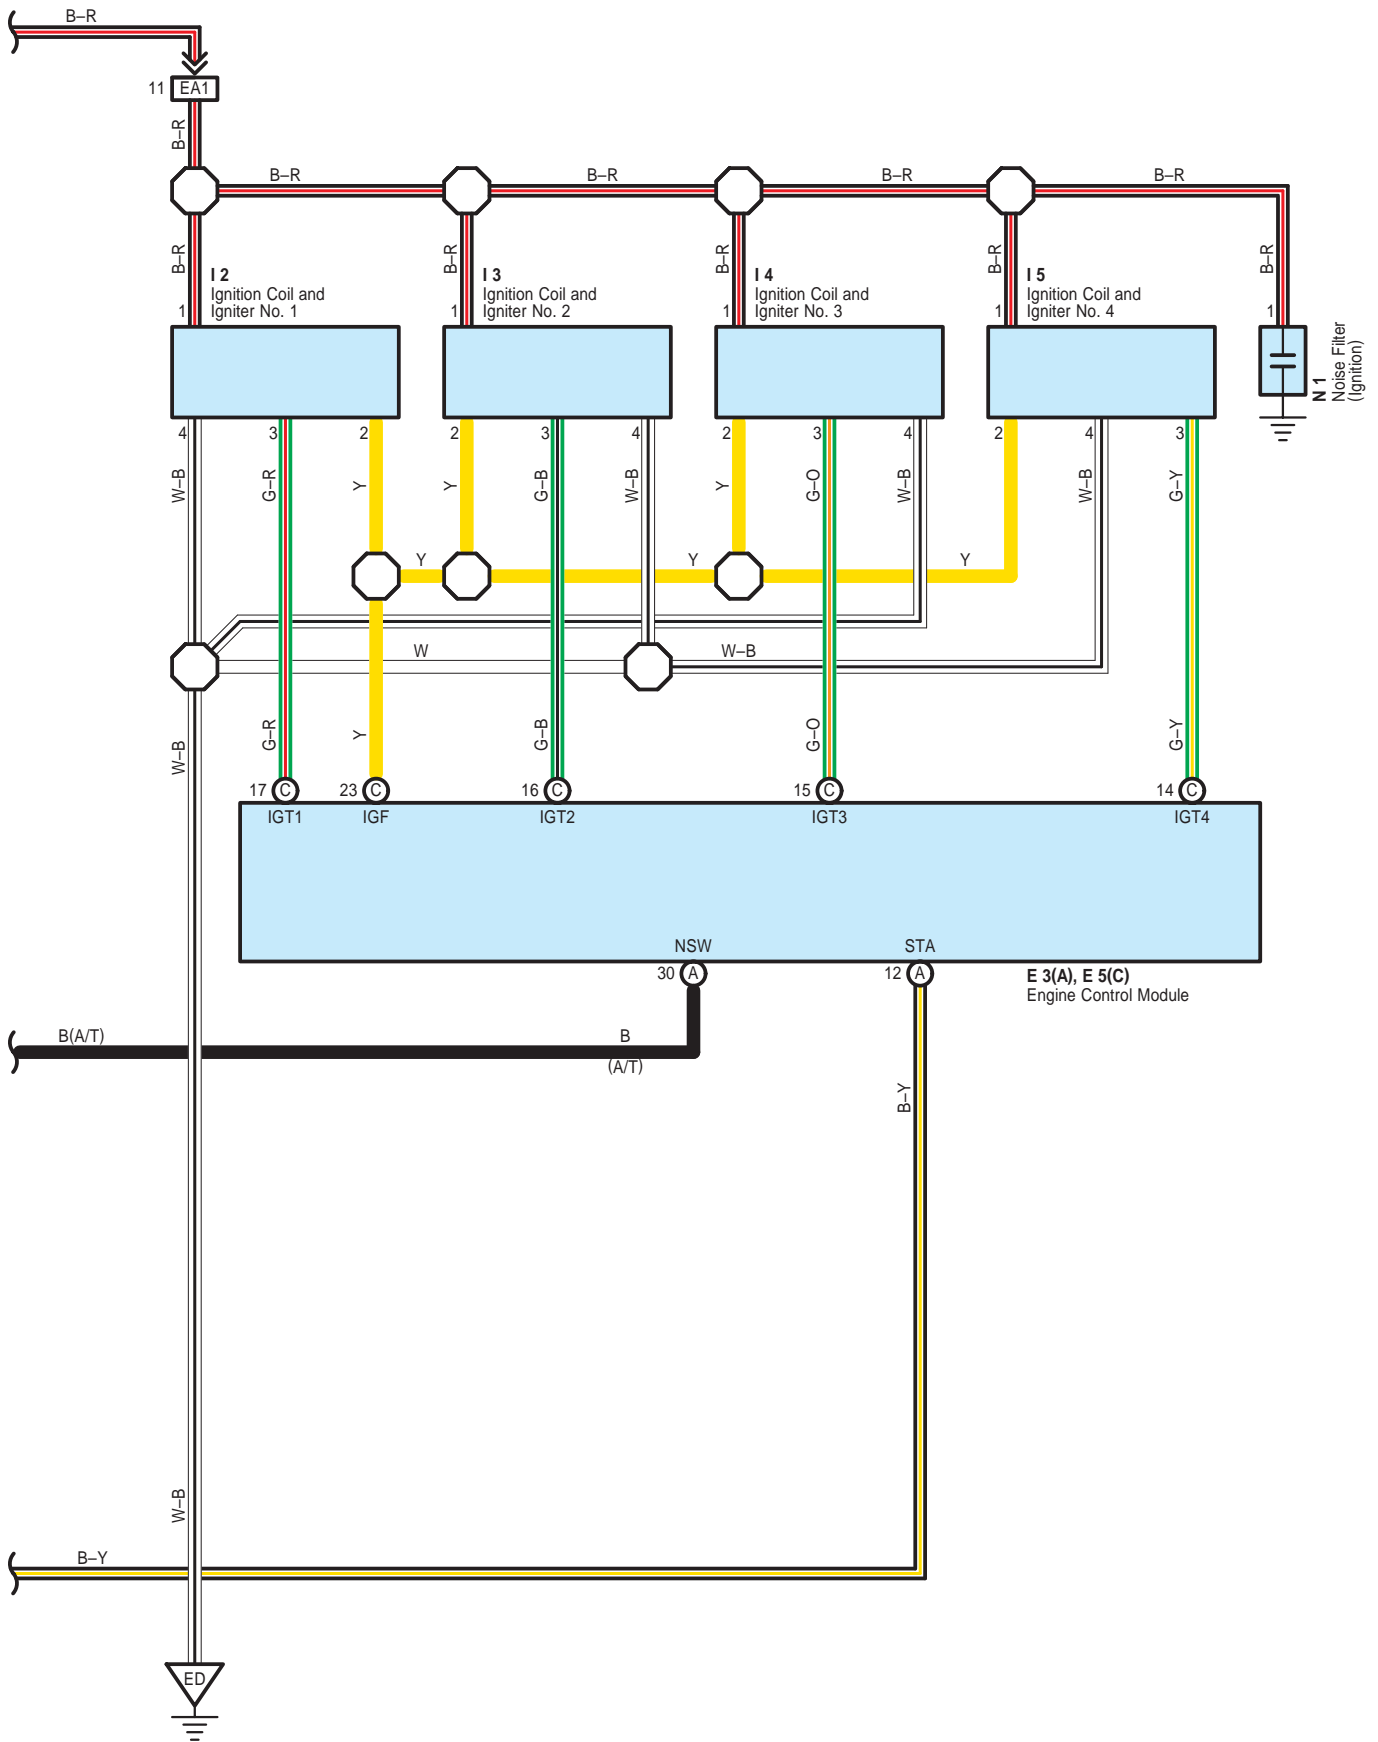

# Starting and Ignition

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A3	28	I2	29	N1	29
C5	30	I3	29	S4	A 29
E3	A 30	I4	29	S5	B 29
E5	C 30	I5	29		
F8	28	I10	30		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1E	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1O		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	34	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B)
IF1	35	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IF2		

## ▽ : Ground Points

Code	See Page	Ground Points Location
EB	34	Front Left Fender Apron
ED	34	Engine Block

