


Charging

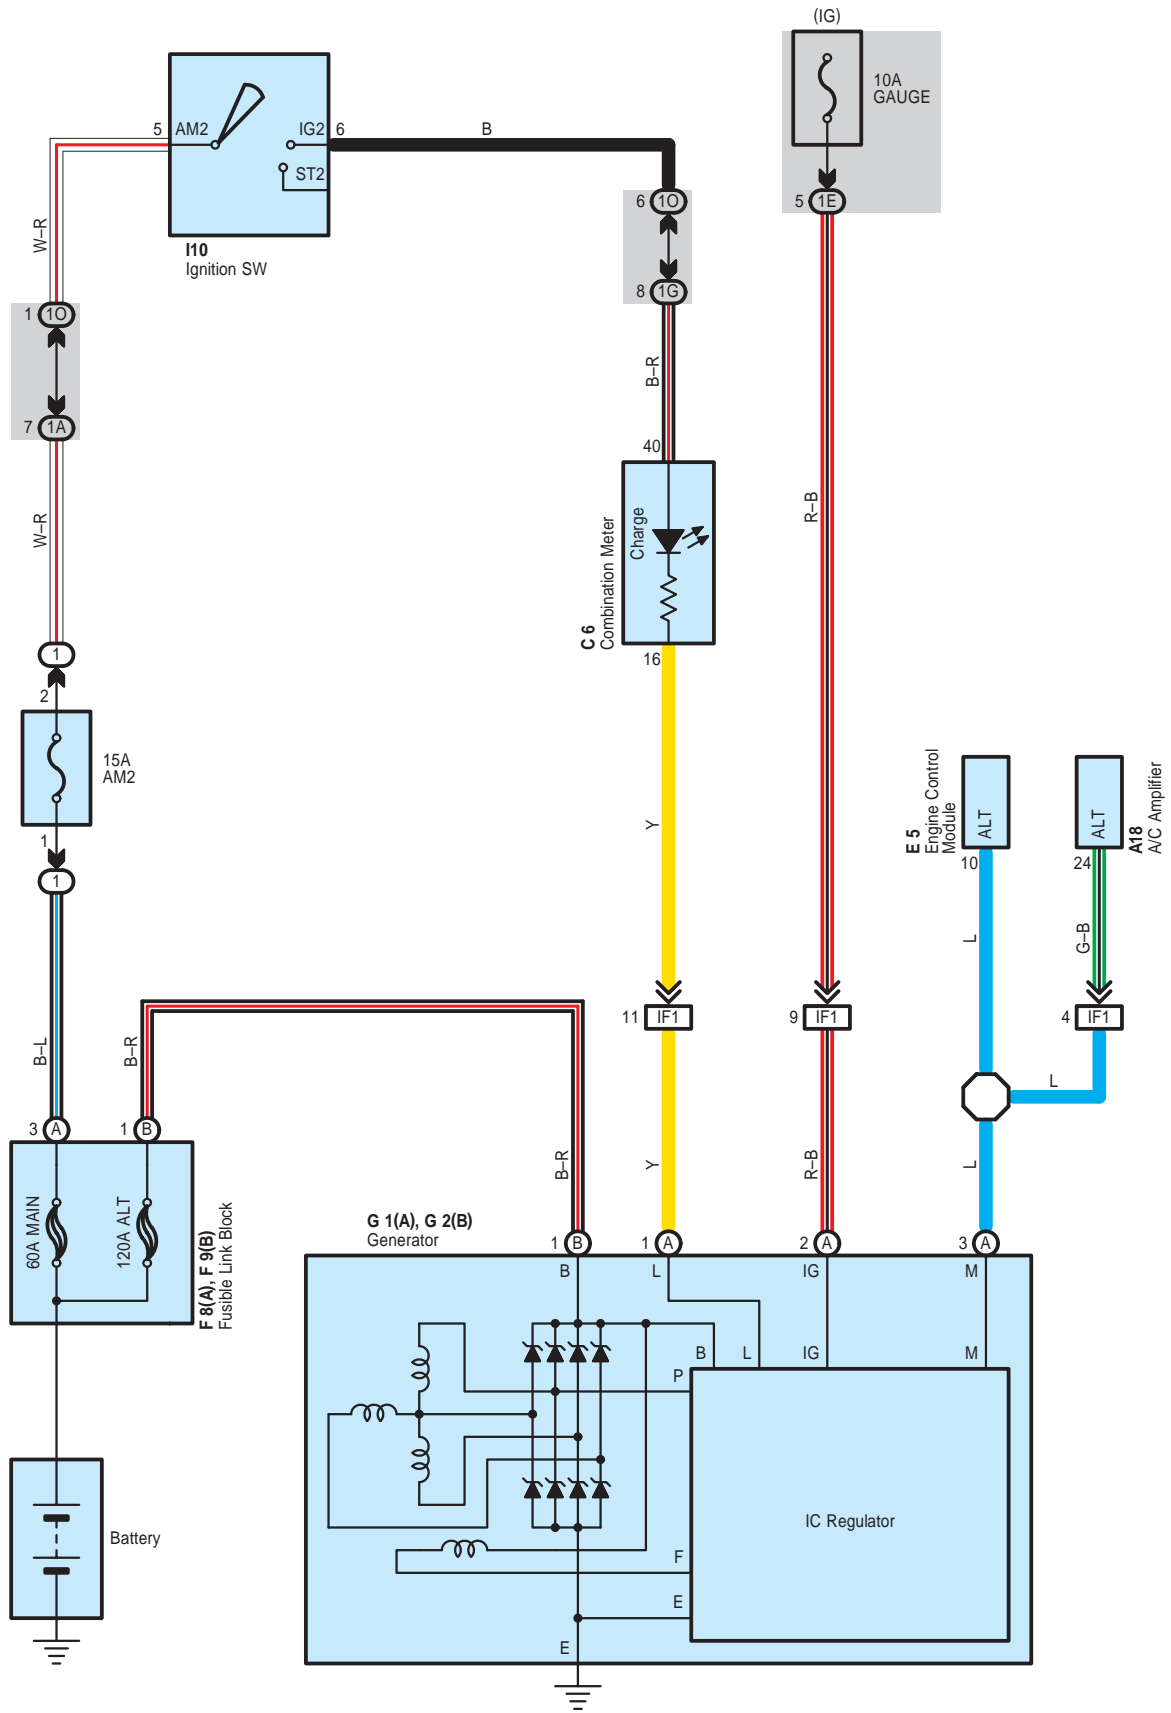

: **Parts Location**

Code	See Page	Code	See Page	Code	See Page
A18	30	F8	A 28	G2	B 28
C6	30	F9	B 28	I10	30
E5	30	G1	A 28		

: **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1E	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
1O		

: **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	35	Engine Wire and Instrument Panel Wire (Behind the Glove Box)