


# Turn Signal and Hazard Warning Light

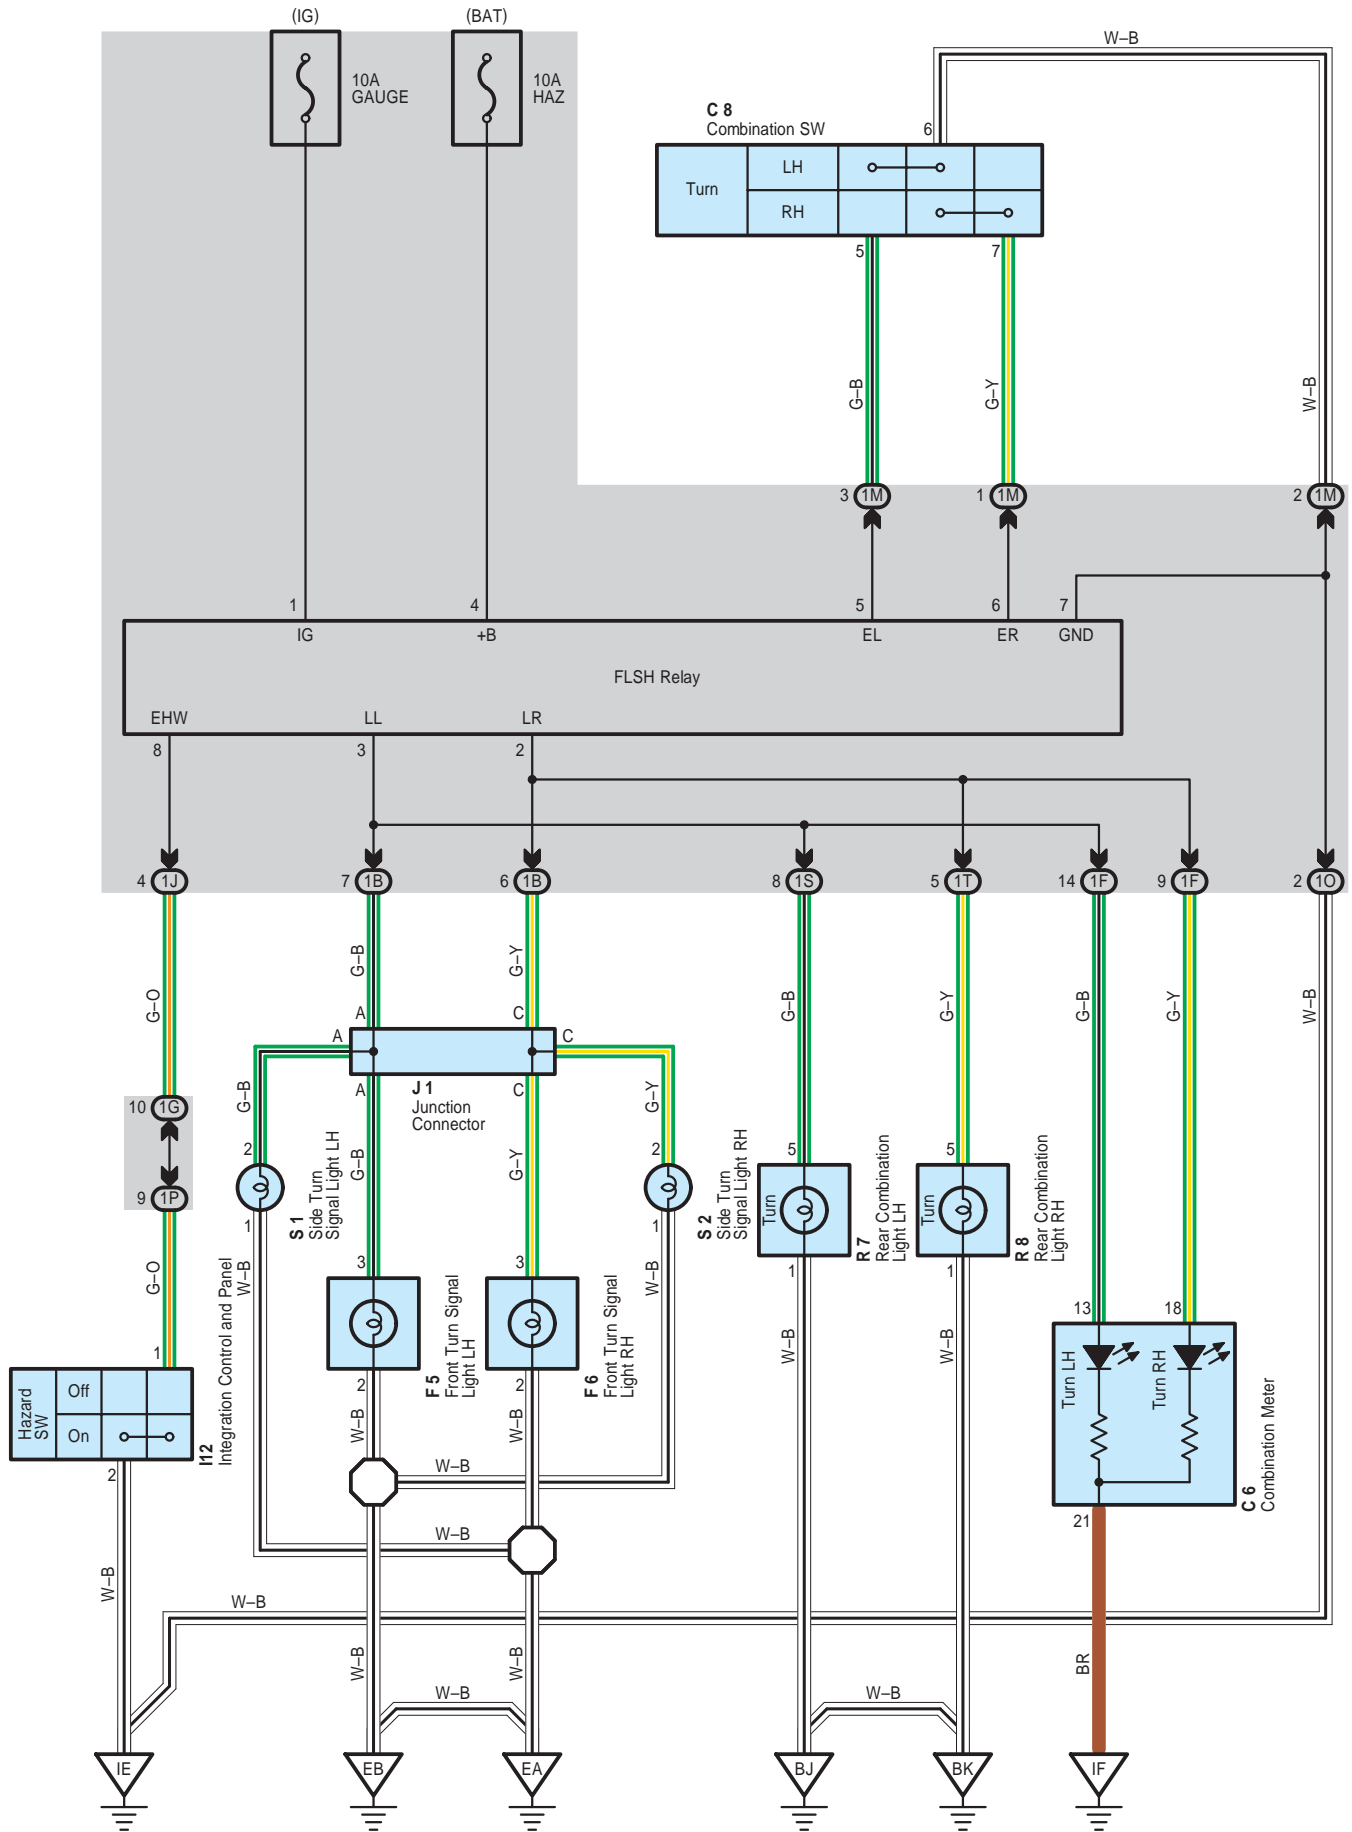

**○ : Parts Location**

Code	See Page	Code	See Page	Code	See Page
C6	30	I12	30	S1	29
C8	30	J1	31	S2	29
F5	28	R7	33		
F6	28	R8	33		

**○ : Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1F	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1G		
1J		
1M		
1O		
1P		
1S	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
1T		

**▽ : Ground Points**

Code	See Page	Ground Points Location
EA	34	Front Right Fender Apron
EB	34	Front Left Fender Apron
IE	35	Left Kick Panel
IF	35	Instrument Panel Brace LH
BJ	36	Rear Quarter Panel Inner LH
BK	36	Rear Quarter Panel Inner RH