


Interior Light

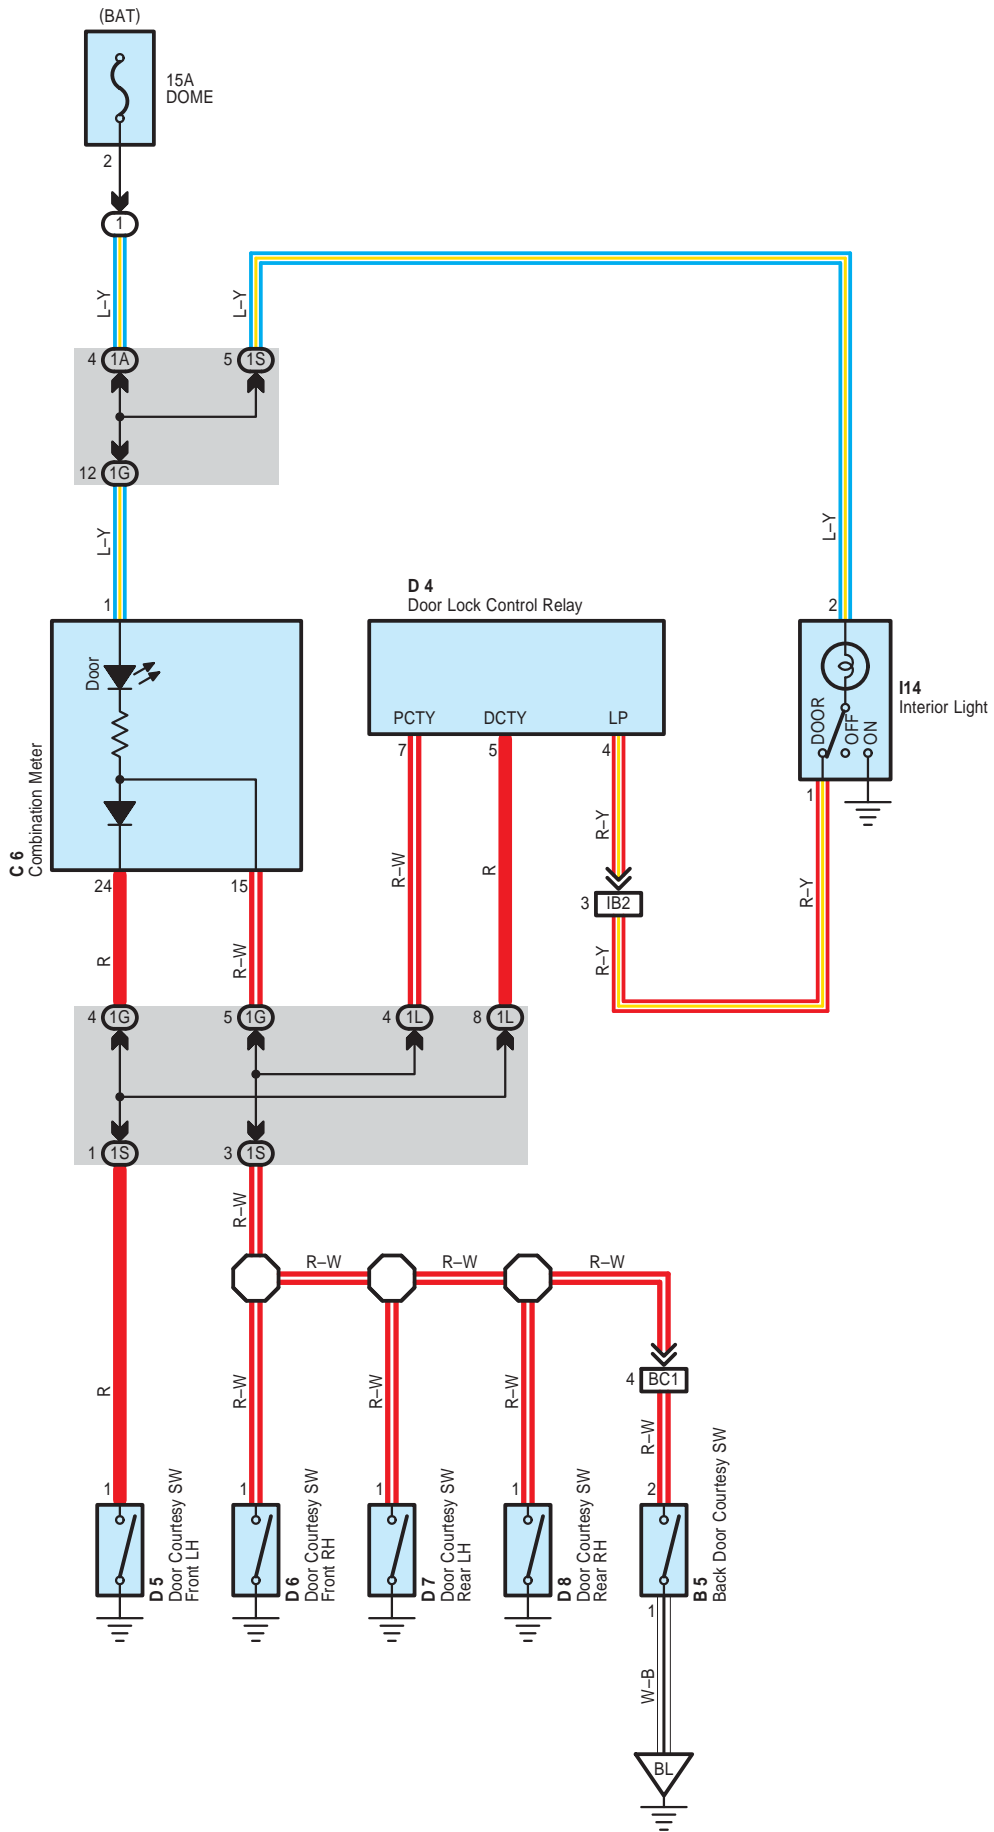

 : **Parts Location**

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| B5 | 32 | D5 | 32 | D8 | 32 |
| C6 | 30 | D6 | 32 | I14 | 32 |
| D4 | 30 | D7 | 32 | | |

 : **Relay Blocks**

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|---|
| 1 | 22 | Engine Room R/B (Engine Compartment Left) |

 : **Junction Block and Wire Harness Connector**

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|---|
| 1A | 24 | Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel) |
| 1G | 25 | Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel) |
| 1L | | |
| 1S | 24 | Floor Wire and Instrument Panel J/B (Lower Finish Panel) |

 : **Connector Joining Wire Harness and Wire Harness**

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|---|
| IB2 | 35 | Floor Wire and Instrument Panel Wire (Behind the Reinforcement LH) |
| BC1 | 36 | Back Door No.1 Wire and Floor Wire (Right Rear Side Quarter Pillar) |

 : **Ground Points**

| Code | See Page | Ground Points Location |
|------|----------|------------------------|
| BL | 36 | Back Door Center |