



Stop Light

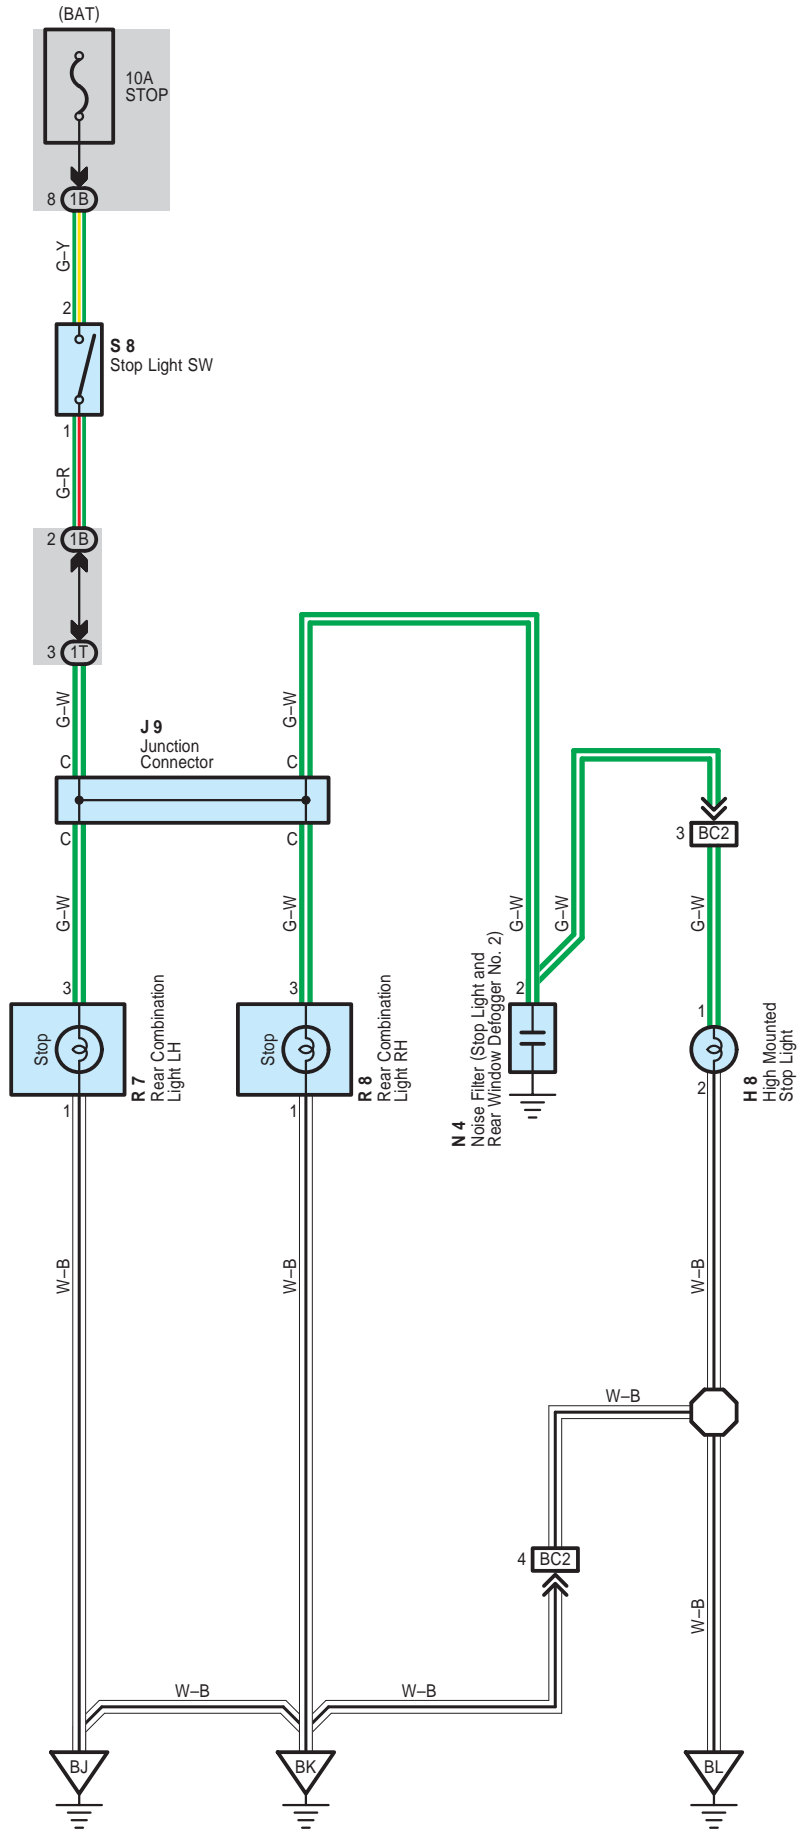

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
H8	32	N4	33	R8	33
J9	32	R7	33	S8	31

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1T	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC2	36	Back Door No.1 Wire and Floor Wire (Right Rear Side Quarter Pillar)

 : **Ground Points**

Code	See Page	Ground Points Location
BJ	36	Rear Quarter Panel Inner LH
BK	36	Rear Quarter Panel Inner RH
BL	36	Back Door Center