


Back-Up Light

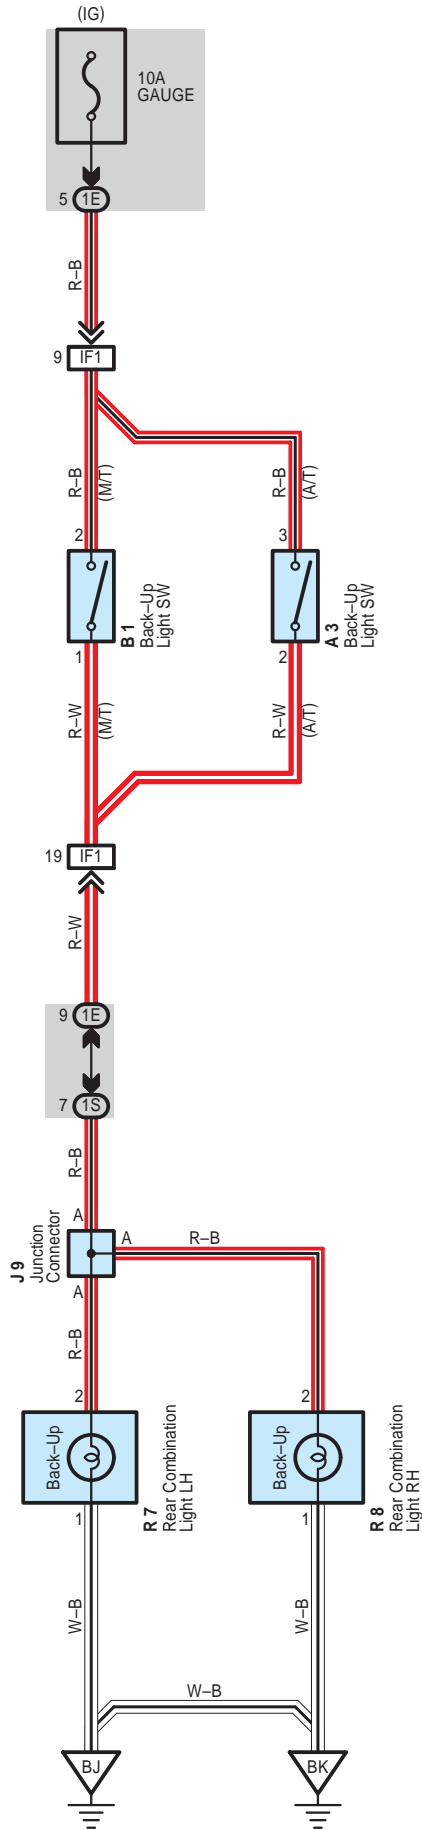

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
A3	28	J9	32	R8	33
B1	28	R7	33		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1S	24	Floor Wire and Instrument Panel J/B (Lower Finish Panel)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	35	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

 : **Ground Points**

Code	See Page	Ground Points Location
BJ	36	Rear Quarter Panel Inner LH
BK	36	Rear Quarter Panel Inner RH