

**Introduction** 2006 model year Scion xA and xB vehicles are equipped with anti-rust covers to protect the disc brake rotors from weather elements and initial rust before the vehicle is delivered to the customer. The anti-rust covers should remain on the wheels as long as possible before delivery. This bulletin provides the removal procedure.

**NOTE:**

- Do NOT remove the anti-rust covers during Pre-Delivery Service (PDS) if the vehicle will be stored after PDS.
- Remove the anti-rust covers just prior to delivery to customers.

**Applicable Vehicles**


- 2006 model year **Scion xA** and **xB** vehicles.

**Warranty Information**

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	—	—	—	—


**Removal Procedure**

1. Refer to Figure 1 for the outside disc brake anti-rust cover attachment.

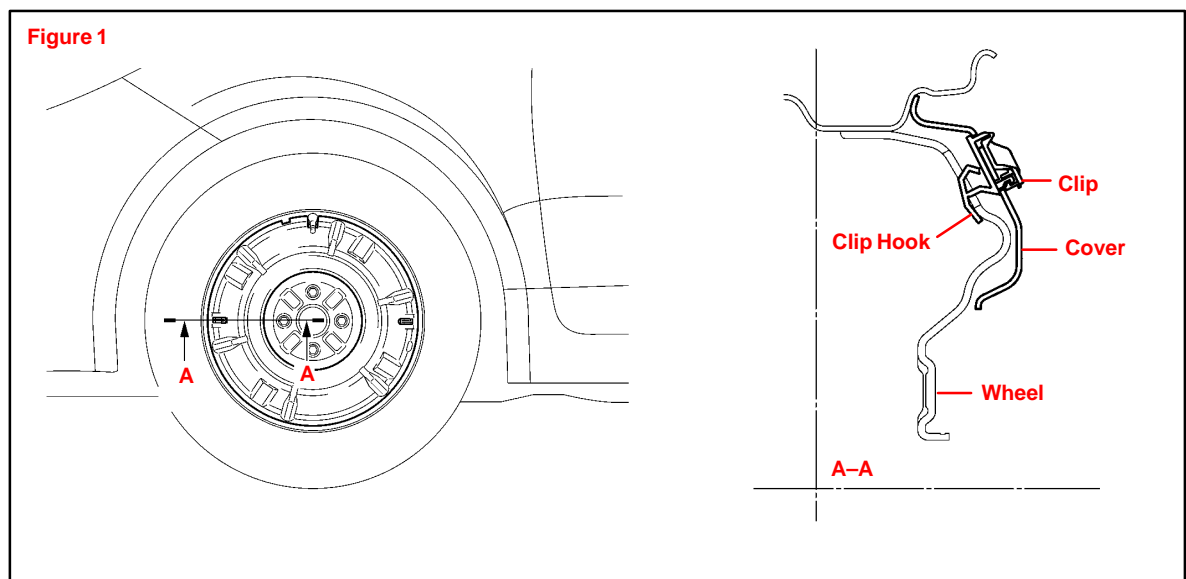

**Removal  
Procedure**  
(Continued)

2. Move the 2 clips in the direction of the arrows to release the lock.

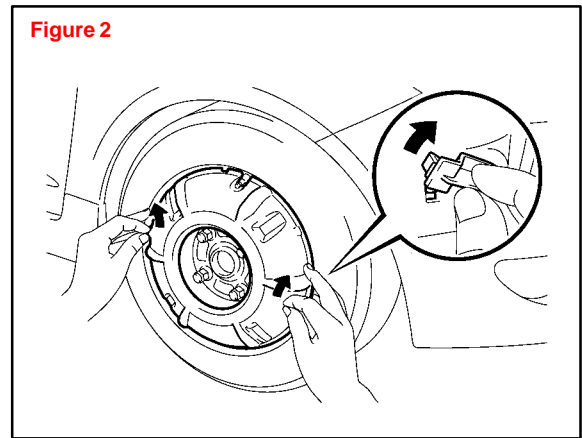

3. Push in the 2 clips to unhook the hooks from the wheel holes and pull the cover to remove it.

**NOTE:**

- If the clip falls off the cover, be sure to recover the clip.
- Avoid scratching the wheel when removing the cover.

**DISPOSAL PROCEDURE:**

When disposing of the cover, obey local sanitation rules.

**Materials:**

- Cover: Fiber molded (paper)
- Clip: Polypropylene

