


DISASSEMBLY

1. REMOVE FAN

Remove the 3 screws and fan.

2. REMOVE FAN MOTOR COVER

Remove the 3 screws and motor cover.

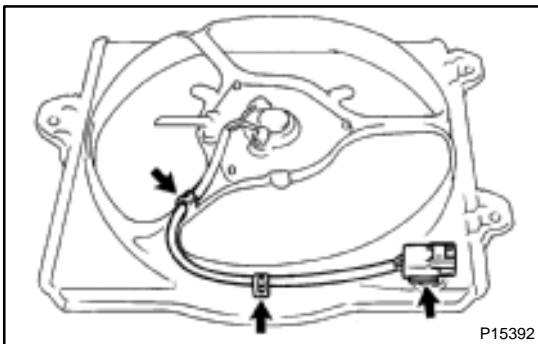

3. REMOVE FAN MOTOR

- (a) Disconnect the wire harness and connector from the fan shroud.
- (b) Remove the 3 screws and motor.