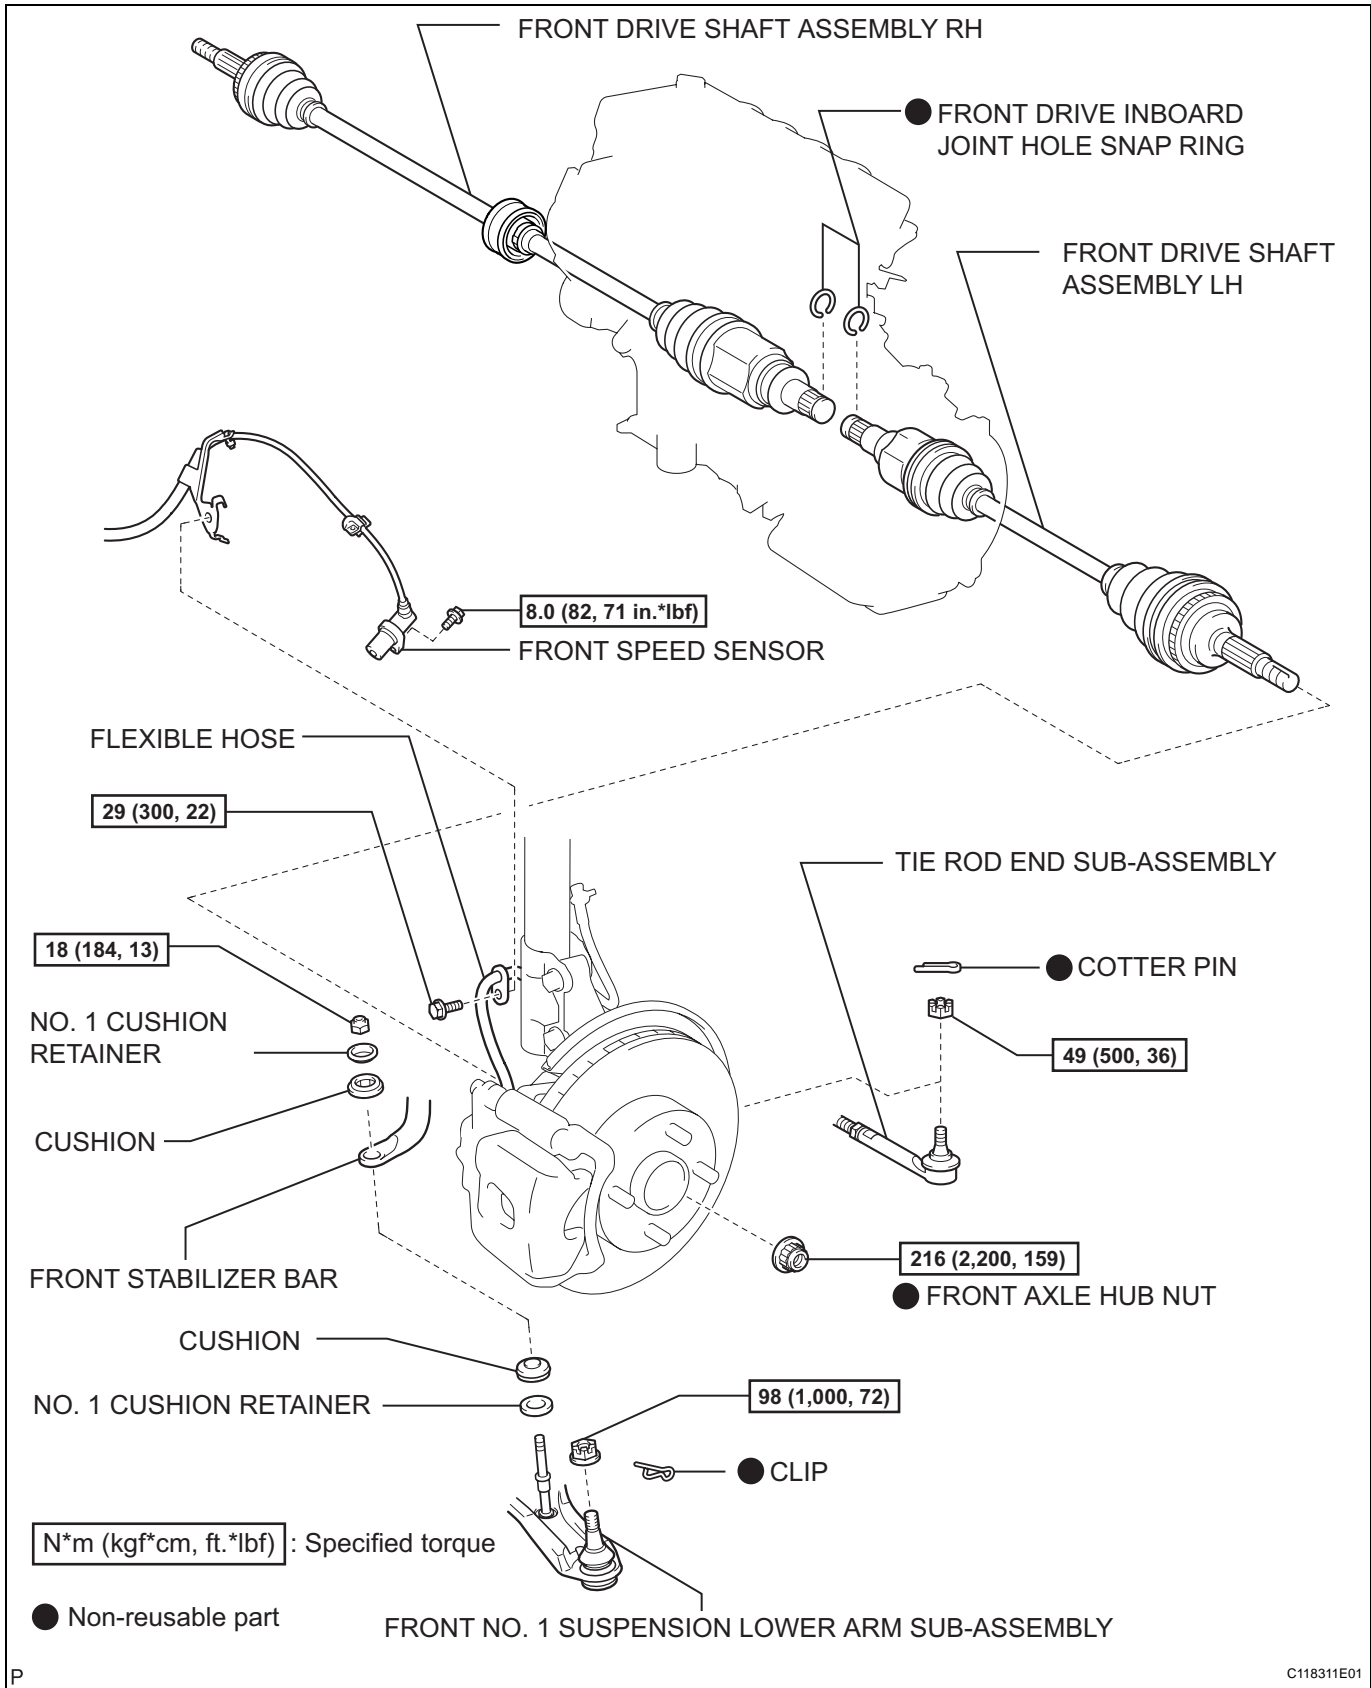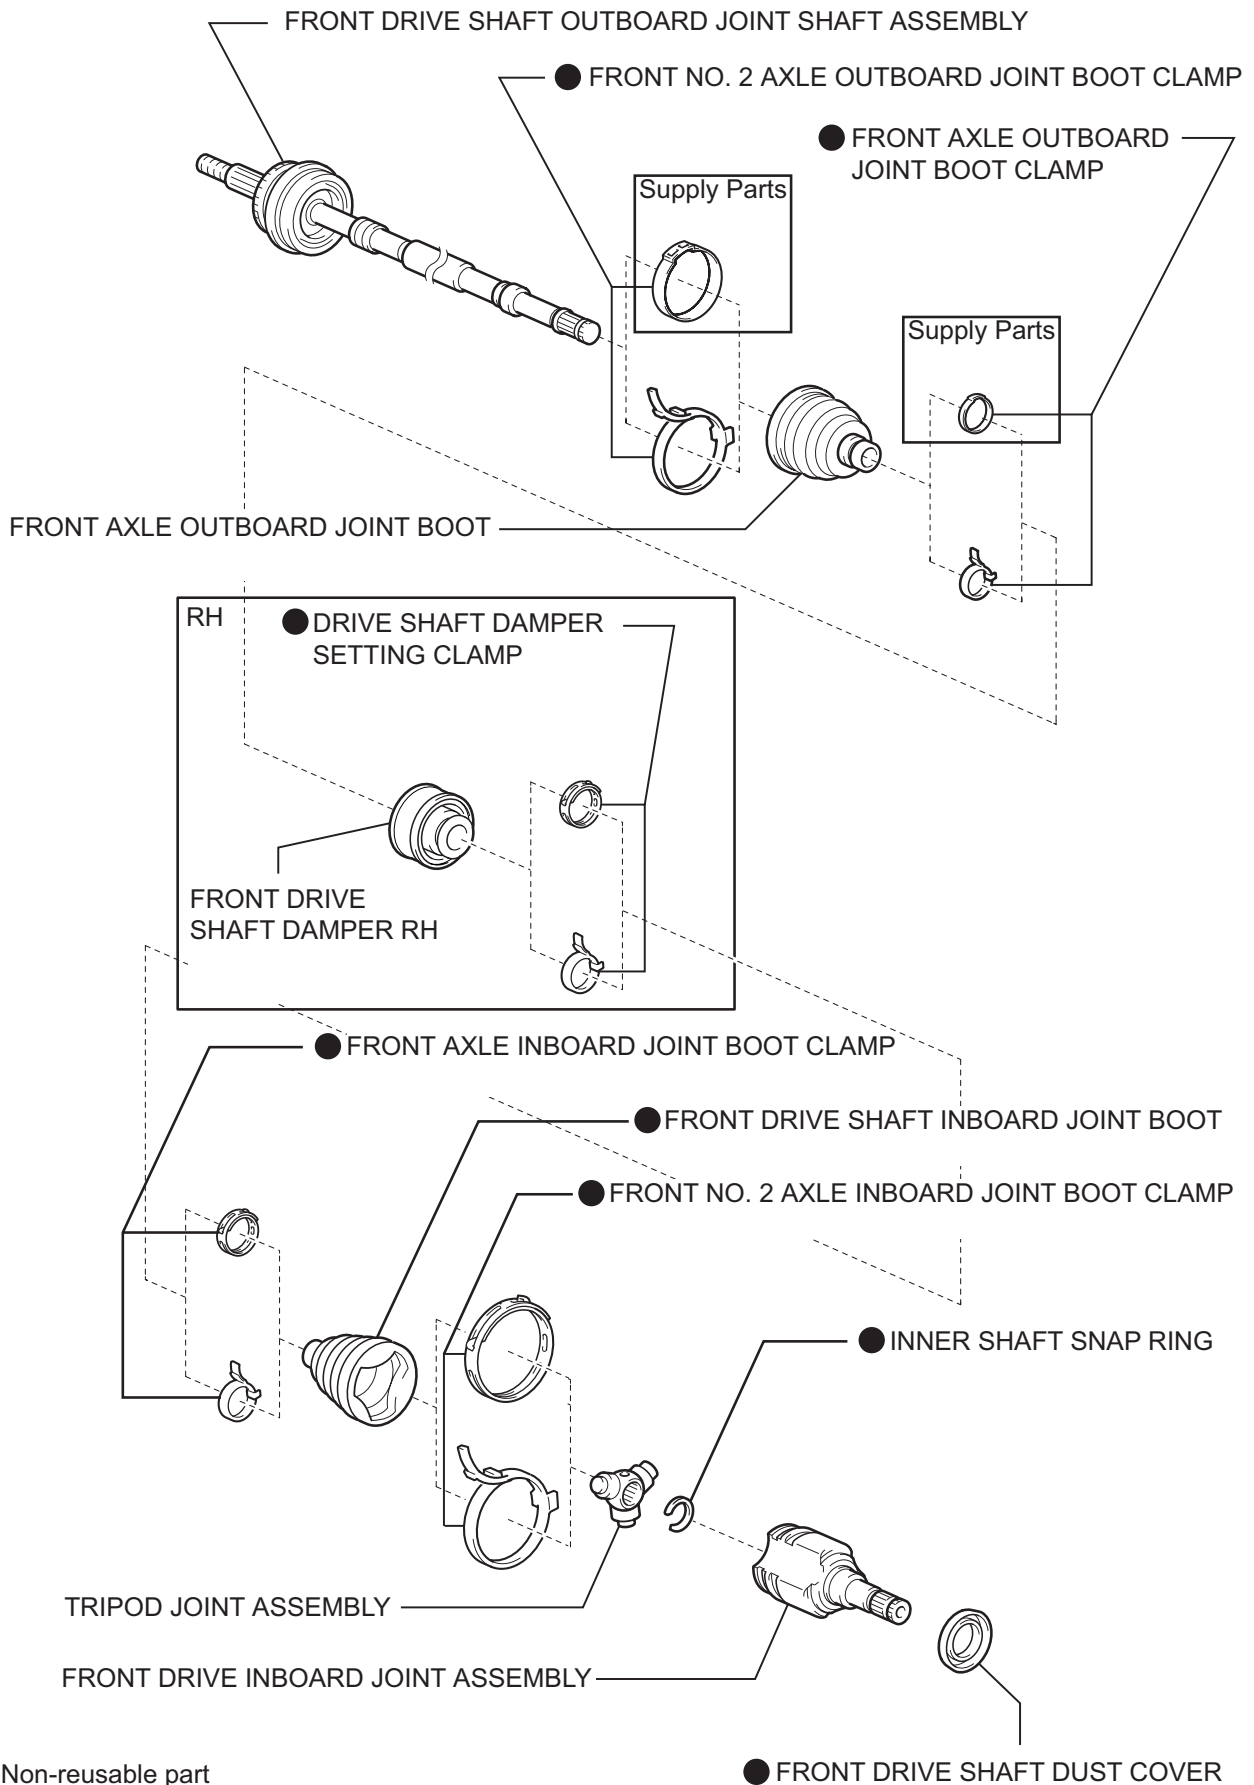# FRONT DRIVE SHAFT ASSEMBLY

COMPONENTS

FRONT DRIVE SHAFT ASSEMBLY RH

● FRONT DRIVE INBOARD JOINT HOLE SNAP RING

FRONT DRIVE SHAFT ASSEMBLY LH

8.0 (82, 71 in.*lbf)

FRONT SPEED SENSOR

FLEXIBLE HOSE

29 (300, 22)

TIE ROD END SUB-ASSEMBLY

18 (184, 13)

● COTTER PIN

NO. 1 CUSHION RETAINER

49 (500, 36)

CUSHION

FRONT STABILIZER BAR

216 (2,200, 159)

● FRONT AXLE HUB NUT

CUSHION

NO. 1 CUSHION RETAINER

98 (1,000, 72)

● CLIP

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

FRONT NO. 1 SUSPENSION LOWER ARM SUB-ASSEMBLY

C118311E01

FRONT DRIVE SHAFT OUTBOARD JOINT SHAFT ASSEMBLY

● FRONT NO. 2 AXLE OUTBOARD JOINT BOOT CLAMP

● FRONT AXLE OUTBOARD JOINT BOOT CLAMP

Supply Parts

Supply Parts

FRONT AXLE OUTBOARD JOINT BOOT

RH

● DRIVE SHAFT DAMPER SETTING CLAMP

FRONT DRIVE SHAFT DAMPER RH

● FRONT AXLE INBOARD JOINT BOOT CLAMP

● FRONT DRIVE SHAFT INBOARD JOINT BOOT

● FRONT NO. 2 AXLE INBOARD JOINT BOOT CLAMP

● INNER SHAFT SNAP RING

TRIPOD JOINT ASSEMBLY

FRONT DRIVE INBOARD JOINT ASSEMBLY

● Non-reusable part

● FRONT DRIVE SHAFT DUST COVER

P

C118312E01

DS