


INSTALLATION


1. INSTALL CANISTER

- (a) Install the canister with the 3 bolts.

Torque: 19 N*m (194 kgf*cm, 14 ft.*lbf)

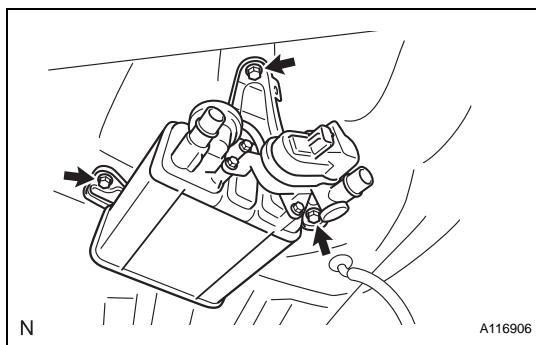


- (b) Connect the 2 tubes and hose.

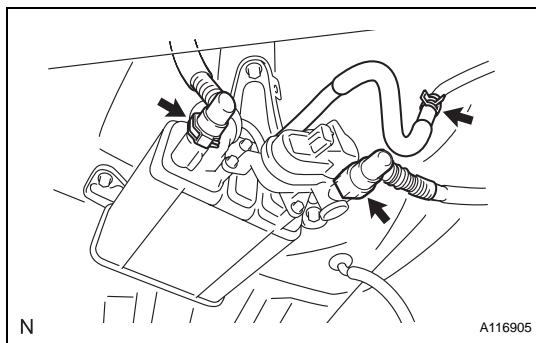

- (1) Connect the air inlet line tube to the canister (leak detection pump).
(2) Connect the vent line tube to the canister.
(3) Connect the purge line hose.

HINT:

Install the hose to the canister, and then attach the retainer.

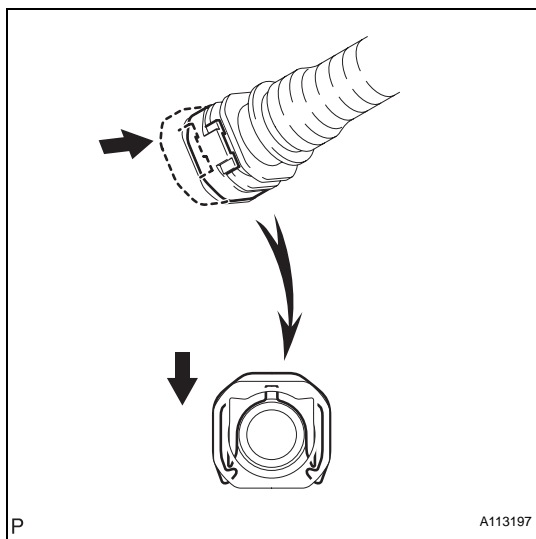

- (c) Connect the connector and attach the 2 clamps.

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

