

## INSTALLATION

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When installing the clip, heat the vehicle body and clip using a heat light.

### Heating temperature

Item	Temperature
Vehicle body	40 to 60°C (104 to 140°F)
Clip	20 to 30°C (68 to 86°F)

### NOTICE:

**Do not heat the vehicle body and clip excessively.**

### 1. REPLACE ROOF DRIP SIDE FINISH MOULDING CLIP

#### HINT:


Use the procedures below to replace damaged or accidentally removed clips. If this step is not necessary, go to the next step.


#### NOTICE:

**After press-fitting the clips, wait 30 minutes or more before installing the moulding.**

#### HINT:

- Minimum hardening time: 30 minutes
  - Time needed for complete hardening: 24 hours
- Remove the double-sided tape that remains on the moulding installation area of the vehicle body, and then clean the surface with white gasoline.
  - Heat the clip installation surfaces of the vehicle body and the installation part of the clips.
  - Install new clips in the positions shown in the illustration. Press-fit the clips by hand.

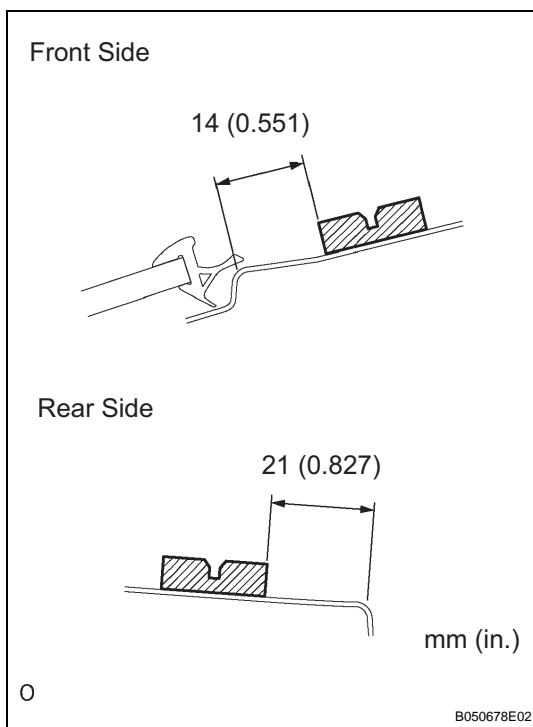

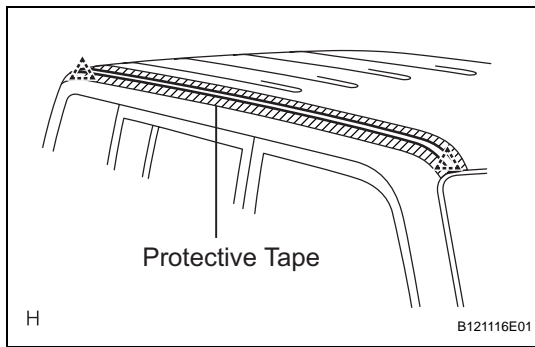

- 2. INSTALL ROOF DRIP SIDE FINISH MOULDING LH**
- (a) Apply protective tape around the edges of the moulding.
  - (b) Attach the clips both in the front and rear ends of the moulding, and then install the moulding.
  - (c) Remove the protective tape from the edges of the moulding.