
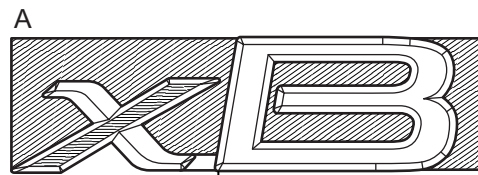


NAME PLATE

COMPONENTS

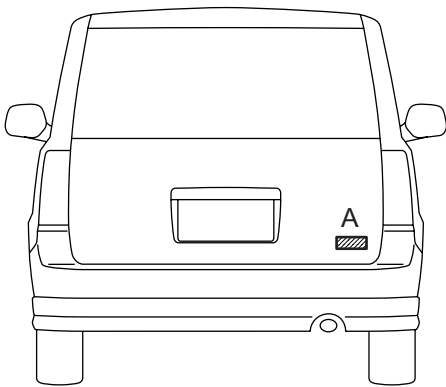

NO. 2 BACK DOOR NAME PLATE

ET

REMOVAL

HINT:

When removing the name plate, heat the vehicle body and name plate using a heat light.

Standard heating temperature

Item	Temperature
Vehicle body	40 to 60°C (104 to 140°F)
Name plate	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the vehicle body and name plate excessively.

1. REMOVE NO. 2 BACK DOOR NAME PLATE

- (a) Put protective tape around the name plate.
- (b) Insert a piano wire between the vehicle body and name plate.
- (c) Tie objects that can serve as handles (for example, wooden blocks) to both wire ends.
- (d) Pull the piano wire and scrape off the double-sided tape that holds the name plate to the vehicle body.

NOTICE:

- If reusing the name plate, take care not to damage the name plate.
- Be careful not to damage the vehicle body.

