


BACK DOOR COURTESY SWITCH

REMOVAL

- 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
- 2. REMOVE BACK DOOR TRIM BOARD ASSEMBLY (See page ED-38)
- 3. REMOVE BACK DOOR LOCK ASSEMBLY (BACK DOOR COURTESY SWITCH) (See page ED-39)

LI

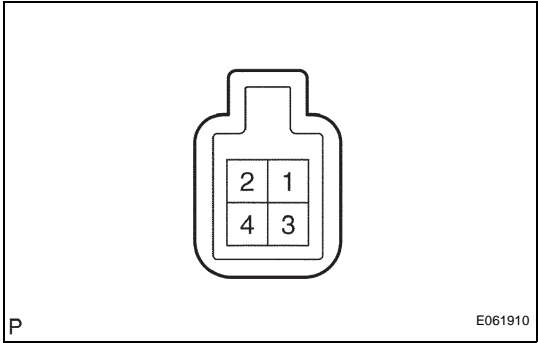

INSPECTION

- 1. INSPECT BACK DOOR LOCK ASSEMBLY (BACK DOOR COURTESY SWITCH)
 - (a) Measure the resistance of the switch.

Standard resistance

Tester connection	Switch Operation	Specified Condition
1 - 2	Back door is closed	10 kΩ or higher
1 - 2	Back door is opened	Below 1 Ω

If the result is not as specified, replace the switch assembly.

INSTALLATION

1. INSTALL BACK DOOR LOCK ASSEMBLY (BACK DOOR COURTESY SWITCH) (See page [ED-41](#))
2. INSTALL BACK DOOR TRIM BOARD ASSEMBLY (See page [ED-41](#))
3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL