INSTALLATION

HINT:

E059361E08

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.




(a) Install the 2 wiper rubber backing plates on the wiper rubber.

NOTICE:

Be sure to install the wiper rubber backing plates in the correct direction.



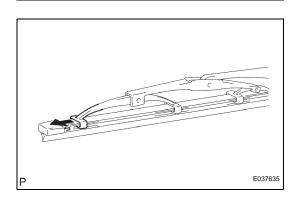

Curved

- (b) Install the wiper rubber so that the head part (longer side) of the wiper rubber faces the arm axle side. NOTICE:
 - Push in the front wiper blade into the grooves of the wiper rubber to engage them completely.
 - Put back the wiper arm of the passenger side before putting back the driver side wiper arm.