INSTALLATION

- 1. INSTALL BRAKE PEDAL PAD
 - (a) Install the brake pedal pad to the brake pedal.

2. INSTALL STOP LIGHT SWITCH ASSEMBLY


(a) Install the stop light switch to the support with the nut.


Torque: 26 N*m (265 kgf*cm, 19 ft.*lbf)



- (a) Apply lithium soap base glycol grease to the ends and sides of 2 new brake pedal bushes and brake pedal shaft.
- (b) Install the switch cushion.
- (c) Install the brake pedal and 2 brake pedal bushes to the brake pedal support with the brake pedal shaft and nut.


Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)

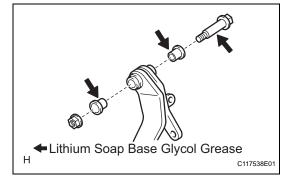

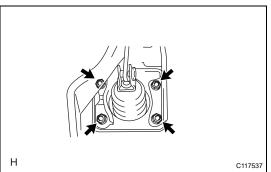

4. INSTALL BRAKE PEDAL SUPPORT SUB-ASSEMBLY


(a) Install the brake pedal support with the 4 nuts. Torque: 13 N*m (127 kgf*cm, 9 ft.*lbf)

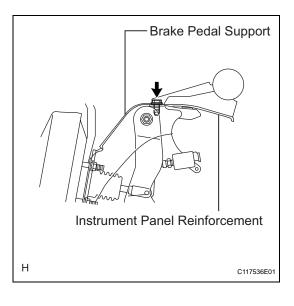

(b) Install the bolt on the brake pedal support.

Torque: 21 N*m (214 kgf*cm, 15 ft.*lbf)



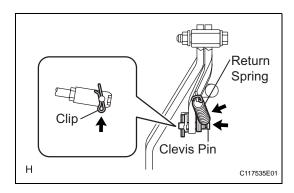

5. CONNECT MASTER CYLINDER PUSH ROD CLEVIS

- (a) Apply lithium soap base glycol grease to the clevis pin.
- (b) Install the clevis pin and clip.

NOTICE:

The direction for the clip installation is as shown in the illustration.

- (c) Install the brake pedal return spring.
- (d) Connect the stop light switch connector to the stop light switch.

6. INSTALL LOWER INSTRUMENT PANEL ASSEMBLY

- (a) Install the instrument panel (see page IP-24).
- 7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
- 8. CHECK AND ADJUST BRAKE PEDAL HEIGHT (See page BR-9)
- 9. CHECK BRAKE PEDAL FREE PLAY (See page BR-9)
- 10. CHECK BRAKE PEDAL RESERVE DISTANCE (See page BR-10)
- 11. CHECK SRS WARNING LIGHT (w/ SRS Airbag)
 - (a) Check the SRS warning light (see page RS-18).