

DTC**B0138/72****Short to B+ in Front Pretensioner Squib LH Circuit****DESCRIPTION**


The front pretensioner LH circuit consists of the center airbag sensor assembly and the front seat outer belt assembly (seat belt pretensioner LH).

This circuit instructs the SRS to deploy when deployment conditions are met.

DTC B0138/72 is recorded when a short to B+ is detected in the front pretensioner squib LH circuit.

RS


DTC No.	DTC Detection Condition	Trouble Area
B0138/72	<ul style="list-style-type: none">• Short circuit in front pretensioner squib LH wire harness (to B+)• Front pretensioner LH malfunction• Center airbag sensor assembly	<ul style="list-style-type: none">• Front seat outer belt assembly LH (front pretensioner squib LH)• Center airbag sensor assembly• Floor wire

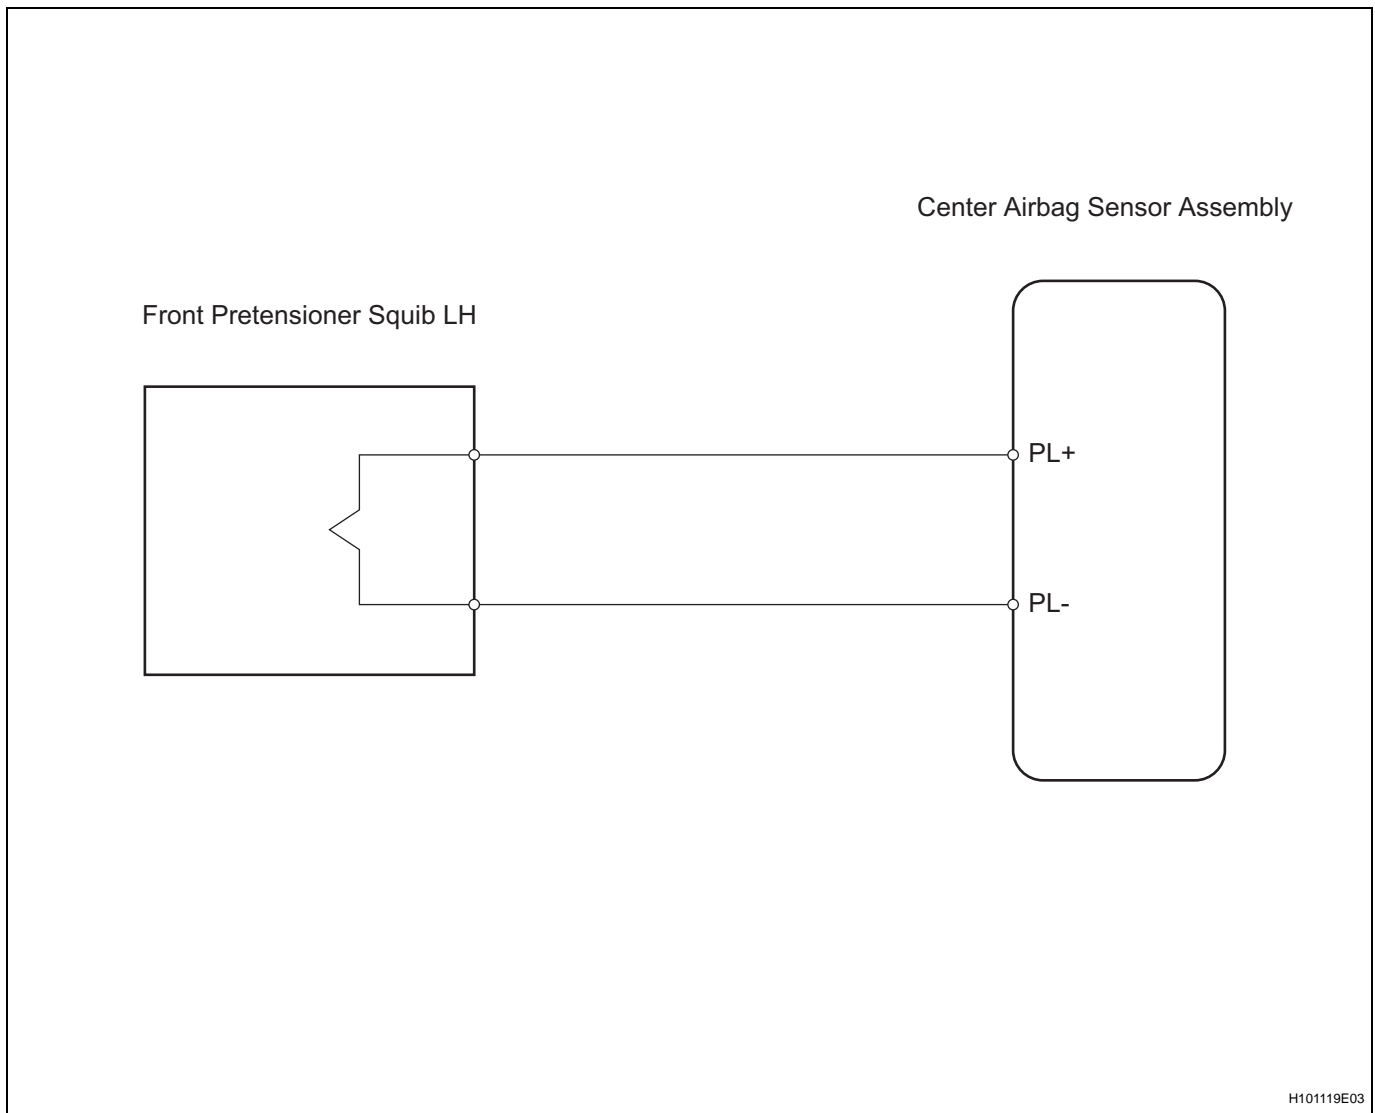WIRING DIAGRAM

1

CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB LH CIRCUIT)

RS

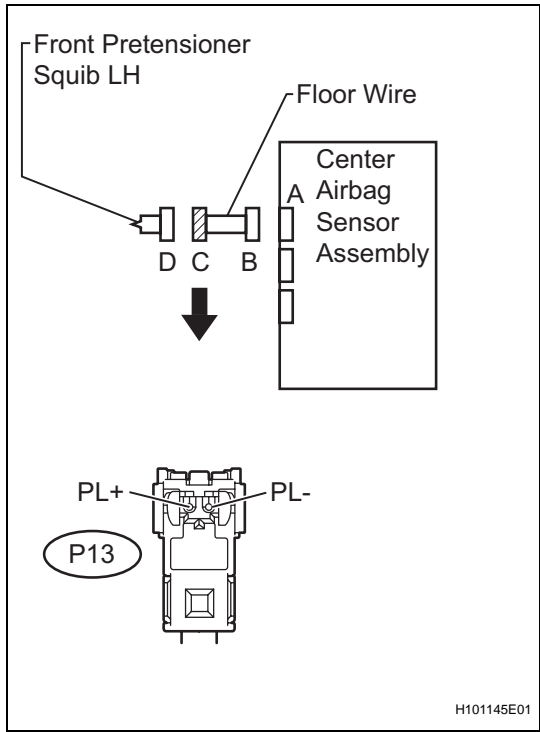

OK

2

CHECK CENTER AIRBAG SENSOR ASSEMBLY


- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connectors from the center airbag sensor assembly and the front seat outer belt assembly LH.
- (d) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (e) Measure the voltage according to the value(s) in the table below.

Standard voltage

Tester Connection (Connector "C")	Condition	Specified Condition
P13-1 (PL+) - Body ground	Ignition switch ON	Below 1 V
P13-2 (PL-) - Body ground		

NG

REPAIR OR REPLACE FLOOR WIRE

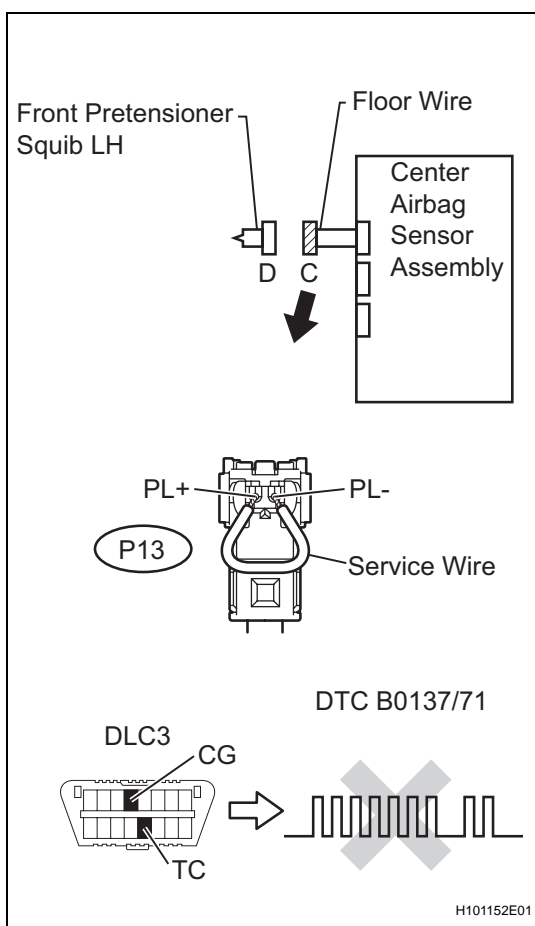

OK

- (d) Using a service wire, connect terminals PL+ and PL- of connector "C".

NOTICE:

- **Twist the end of the service wire in order to insert to the connector.**
- **Do not forcibly insert the twisted service wire into the terminals of the connector when connecting.**

- (e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (g) Clear the stored DTCs in the memory (see page RS-21).
- (h) Turn the ignition switch to the LOCK position.
- (i) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (j) Check for the DTCs (see page RS-21).

OK:**B0138/72 is not output.****HINT:**

Codes other than code B0137/72 may be output at this time, but they are not related to this check.

NG


REPLACE CENTER AIRBAG SENSOR ASSEMBLY

3

CHECK FRONT SEAT OUTER BELT ASSEMBLY LH

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the service wire from the connector "C".
- (d) Connect the connector to the front seat outer belt assembly LH.
- (e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (f) Turn the ignition switch to the ON position, and wait at least 60 seconds.
- (g) Clear the stored in the memory (see page RS-21).
- (h) Turn the ignition switch LOCK position.
- (i) Turn the ignition switch ON position, and wait for at least 60 seconds.

RS

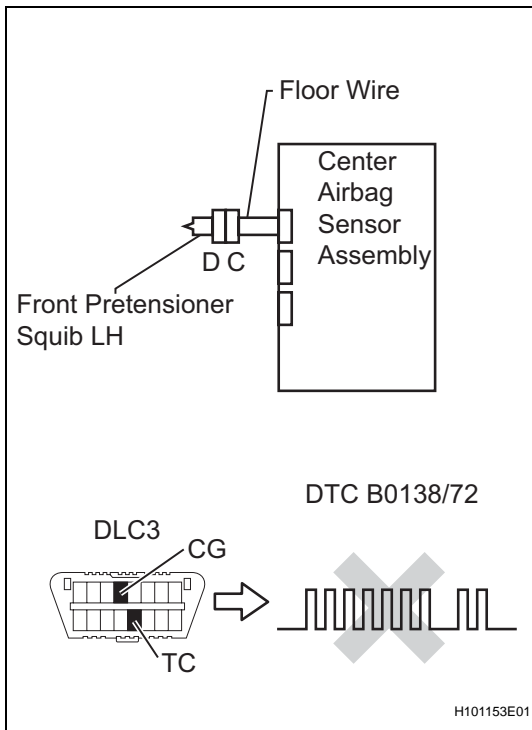

- (j) Check for the DTCs (see page [RS-21](#)).

OK:

DTC B0138/72 is not output.

HINT:

Codes other than code B0138/72 may be output at this time, but they are not related to this check.

NG

REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH

OK

PROBLEM SYMPTOMS SIMULATION