



## REMOVAL

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE REAR WHEEL
2. REMOVE REAR BRAKE DRUM SUB-ASSEMBLY
3. REMOVE REAR AXLE HUB AND BEARING ASSEMBLY

- (a) Disconnect the skid control sensor connector.
- (b) Remove the 4 bolts, hub and bearing assembly.

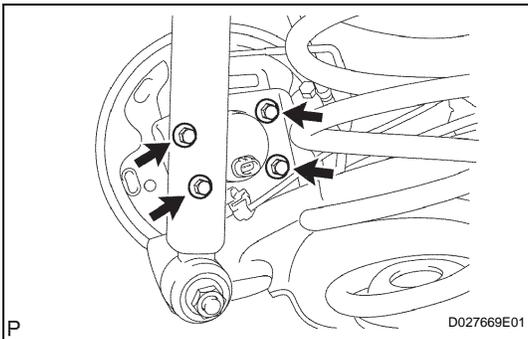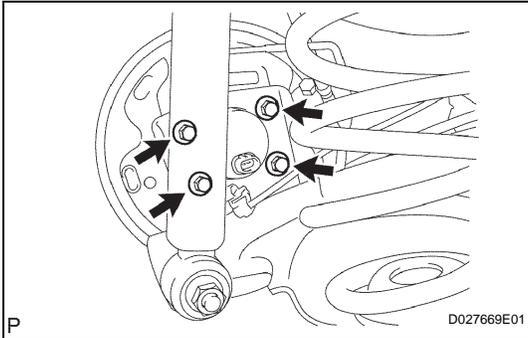

## INSTALLATION

1. INSTALL REAR AXLE HUB AND BEARING ASSEMBLY

- (a) Install the hub and bearing assembly with the 4 bolts.

**Torque: 61 N\*m (622 kgf\*cm, 45 ft.\*lbf)**

- (b) Connect the skid control sensor connector.

### NOTICE:

**Do not twist the sensor wire when connecting it.**

2. INSPECT REAR AXLE DEVIATION AND BACKLASH

- (a) Inspect the rear axle deviation and backlash (see page [AH-15](#)).

3. INSTALL REAR BRAKE DRUM SUB-ASSEMBLY

4. INSTALL REAR WHEEL

**Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)**

5. CHECK ABS SPEED SENSOR SIGNAL

- (a) Check the ABS speed sensor signal (see page [BC-7](#)).