

## SRS Warning Light Remains ON


### DESCRIPTION

The SRS warning light is located on the combination meter assembly.

When the SRS is normal, the SRS warning light comes on for approximately 6 seconds after the ignition switch is turned from the LOCK position to the ON position, and then goes off automatically.

If there is a malfunction in the SRS, the SRS warning light comes on to inform the driver of a problem. When terminals TC and CG of the DLC3 are connected, the DTCs are displayed by blinking the SRS warning light.

### WIRING DIAGRAM

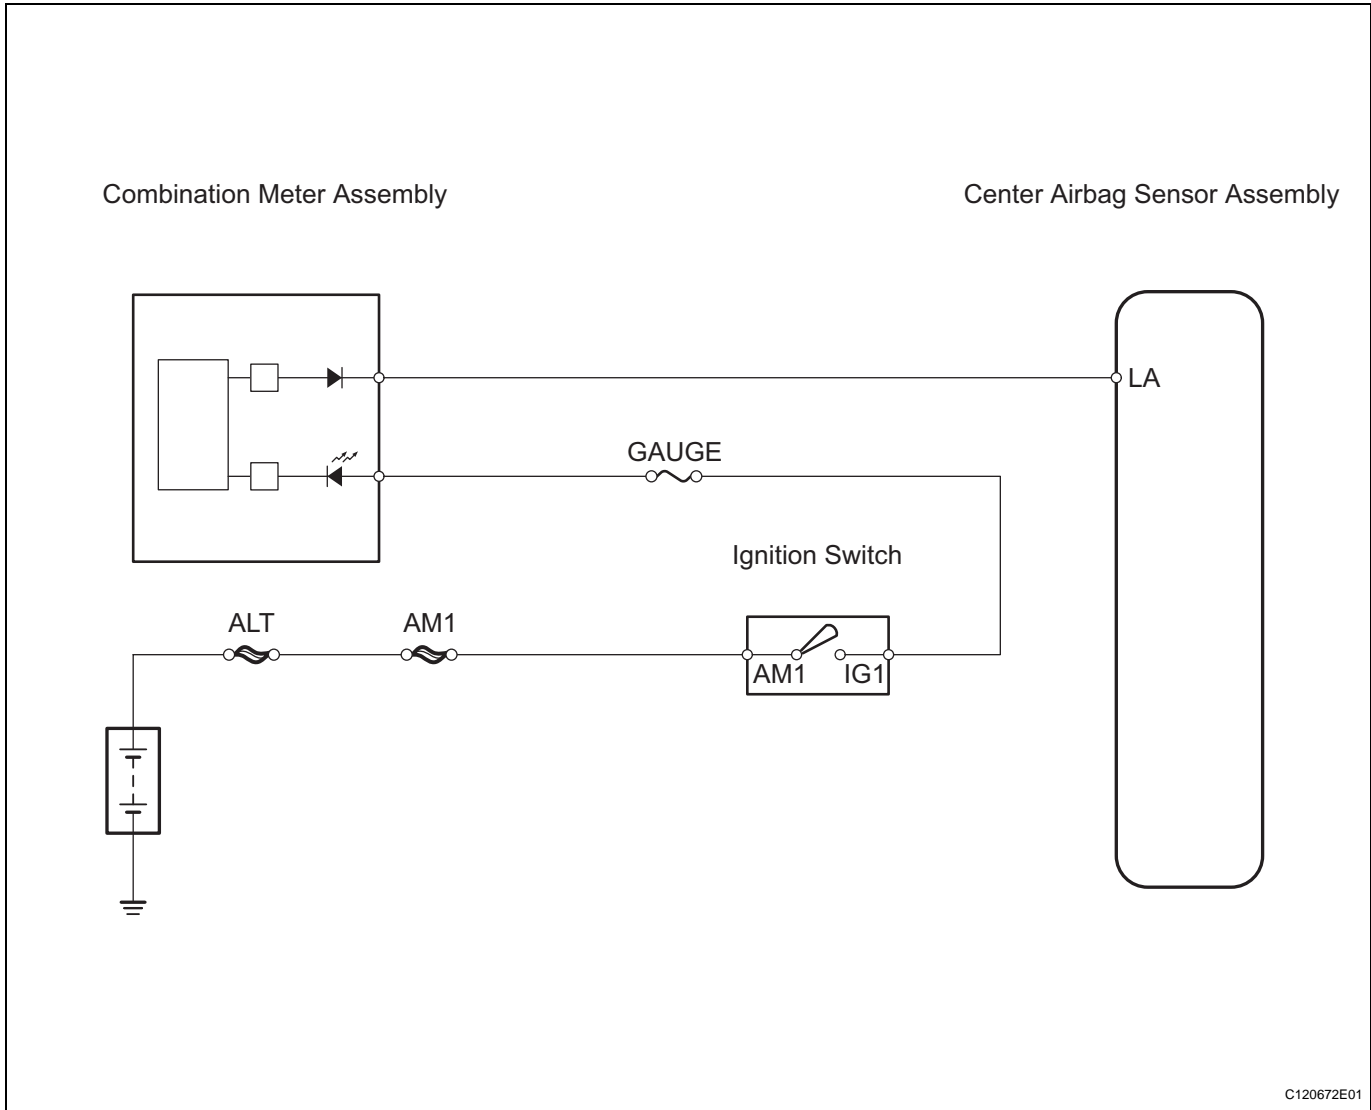

1

#### CHECK CONNECTOR

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.

- (c) Check the connection of the center airbag sensor assembly connectors and the combination meter assembly connector.

**OK:**

**Connectors are connected.**

**NG**

**CONNECT CONNECTORS**

**RS**

**OK**

**2**

## CHECK CENTER AIRBAG SENSOR ASSEMBLY


- (a) Disconnect the C6 connector from the combination meter assembly.  
 (b) Connect the negative (-) terminal cable to the battery.  
 (c) Measure the voltage according to the value(s) in the table below.

**Standard voltage**

Tester Connection	Condition	Specified Condition
C6-34 - Body ground	Ignition switch ON	Above 8 V

**NG**

**Go to step 4**

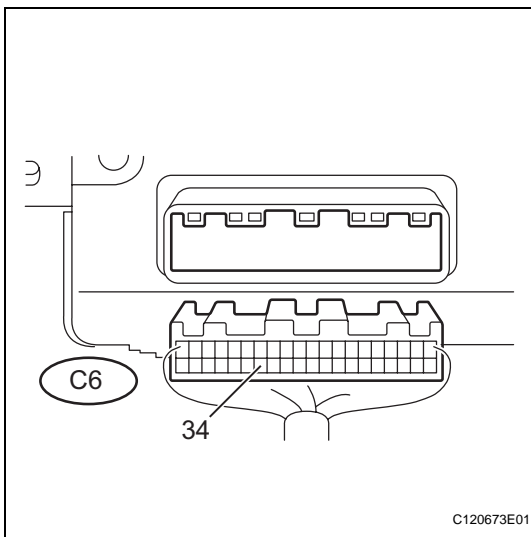


**OK**

**3**

## CHECK INSTRUMENT PANEL WIRE (TO B+) (COMBINATION METER ASSEMBLY - BODY GROUND)

- (a) Disconnect the connector from the center airbag sensor assembly.

RS

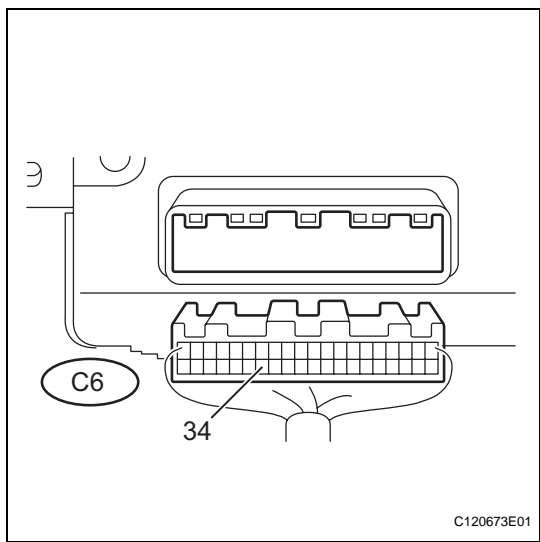

(b) Measure the voltage according to the value(s) in the table below.

**Standard voltage**

Tester Connection	Condition	Specified Condition
C6-34 - Body ground	Ignition switch ON	Below 1 V

NG

**REPAIR OR REPLACE INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR ASSEMBLY - COMBINATION METER ASSEMBLY)**

OK

**REPLACE COMBINATION METER ASSEMBLY**

4


**CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR ASSEMBLY - BODY GROUND)**

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait at least 90 seconds.
- (c) Disconnect the connector from the center airbag sensor assembly.

- (d) Measure the resistance according to the value(s) in the table below.

**Standard resistance**

Tester Connection	Specified Condition
A10-3 (LA) - Body ground	1 M $\Omega$ or higher

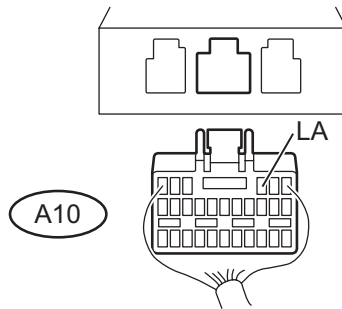**NG****REPAIR OR REPLACE INSTRUMENT PANEL WIRE****RS**


C120671E04

**OK**

5

CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR ASSEMBLY - COMBINATION METER ASSEMBLY)

RS

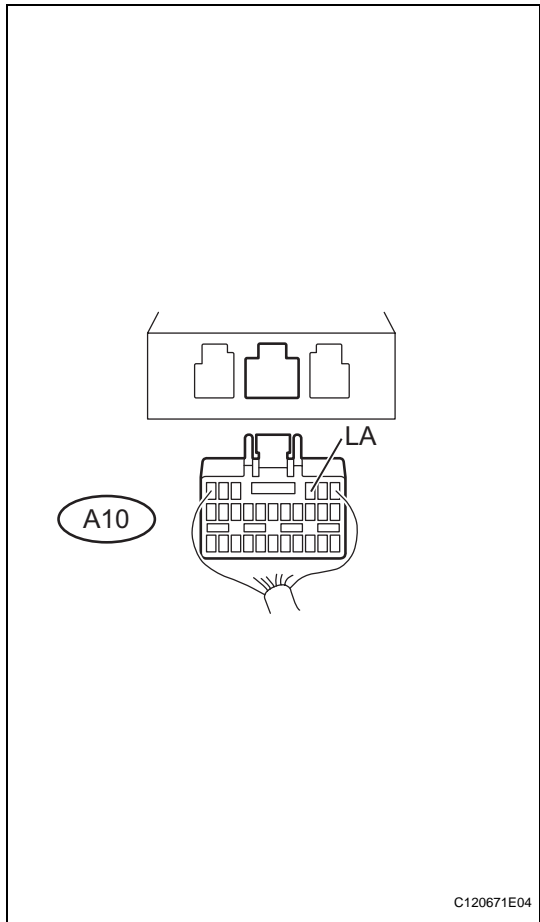

(a) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Specified Condition
A10-3 (LA) - C6-34	Below 1 Ω

NG

REPAIR OR REPLACE INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR ASSEMBLY - COMBINATION METER ASSEMBLY)

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY